

## INTRODUCTION

Features	Benefits
Fast Performance at 100scans/per sec.	Increased productivity resulting in shorter checkout lines and better customer service
Multiple Interfaces On Board	Ensure flexible connectivity,allowing for host "future proofing"
Bright LED and beeper with adjustable volume	Multiple modes of confirmation ensure positive user feedback
Hands-free with stand (Optional)	Enables presentation scanning and easy switching between hands-held and handfree modes
Ergonomic design	Reduces user fatigue with sleek balanced form for maximum comfort and productivity
High-end Appearance Mould	Delicate and Exquisite Appearance bring you the enjoyment of you distinguished
Imported Laser Engine & CK push-button	10,000 hours reliability for the engine , 300,0000 times reliability for the push button
Superb scanning Ability	Enable to scan all the ID bar code , composite component bar code, colorful Bar code, bar code covered by thin film

### Why do you choose our products?

#### 1. Maximum Productivity at an Affordable price

Handheld laser bar code scanner from us delivers performance features at an acceptably affordable price to make your buying decision easier than ever before. From the checkout line to the back room, our products help you make the most of your application-specific solution in a variety of ways including: Transform your Retail, Transportation&Logistics and Industrial Application.

#### 2. Transform your Retail ,Transportation&Logistics and Industrial Application

Adding bar code scanning to your application-specific solution is convenient and flexible. You can configure the bar code scanner by scanning the bar code we offer to realize your wanted function in Retail ,Transportation&Logistics and Industry.

#### 3. Create a More Productive Environment

Our handheld scanner offer a host of features at an economical price. Ease of use, performance and affordability combine to provide you with a powerful productivity tool.

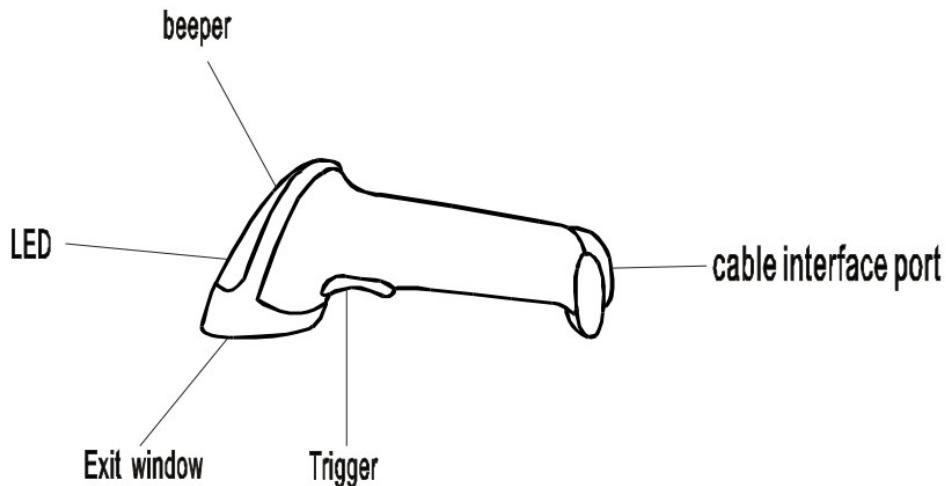
## Tables Of Contents

<b>Introduction.....</b>	<b>1</b>
Features.....	1
Why do you choose our products.....	1
<b>Barcode Scanner Interface Installing and Removing .....</b>	<b>4-6</b>
<b>Multiscan Functions.....</b>	<b>7-8</b>
Version No.....	7
Output Mode.....	7
Buzzer/Led.....	7
Image Setup.....	8
Add Code ID .....	8
Scanning Mode.....	8
<b>Interface--KBW.....</b>	<b>8-9</b>
PC Input Mode.....	8
Transmit speed.....	9
KBW Language .....	9
<b>Interface--Serial-1.....</b>	<b>9-10</b>
Baut Rate.....	9
Handshake Protocol.....	9-10
<b>Interface--Serial--2.....</b>	<b>10</b>
DATA BIT.....	10
END BIT.....	10
Parity Check.....	10
<b>Interface--Wand .....</b>	<b>10-11</b>
Barcode128.....	10-11
Speed.....	11
Bar Level.....	11
Code11.....	11
Code39.....	11
<b>Barcode On/Off.....</b>	<b>11-13</b>
Code93.....	11
Code128.....	12
CODABAR.....	12
Interleaved 2 of 5.....	12
Industrial 2 of 5.....	12
MSI/PLESSEY.....	12
UPC/EAB.....	13
<b>Barcode Symbol Setup--1.....</b>	<b>13-14</b>
Code11.....	13
Code39.....	13-14
<b>Barcode Symbol Setup--2.....</b>	<b>14-15</b>
Code39.....	14

Code128.....	14
CODABAR.....	15
<b>Barcode Symbol Setup--3.....</b>	<b>15-16</b>
CODABAR.....	15
Interleaved 2 of 5.....	15
Industrial 2 of 5.....	15-16
<b>Barcode Symbol Setup--4.....</b>	<b>16-17</b>
MSI/PLESSEY.....	16
UPC/EAB.....	16-17
<b>Barcode Symbol Setup--5.....</b>	<b>17-18</b>
UPC/EAB.....	18
<b>Barcode Symbol Setup--6.....</b>	<b>18</b>
UPC/EAB.....	18
<b>Edit Setup Barcodes.....</b>	<b>18-19</b>
<b>MACRO/Special Keys Setup Barcodes.....</b>	<b>19</b>
<b>Termination String Setup Barcodes.....</b>	<b>19-20</b>
<b>Using The Advanced Setting Mode To Set Up</b>	
<b>The Bar code Scanner.....</b>	<b>21</b>
<b>Setup Category .....</b>	<b>22-23</b>
<b>Editing Keys.....</b>	<b>23-24</b>
<b>Option No.&amp;Description.....</b>	<b>24-31</b>
<b>Appendix.....</b>	<b>32</b>

# BARCODE SCANNER INTERFACE CABLE INSTALLING AND REMOVING

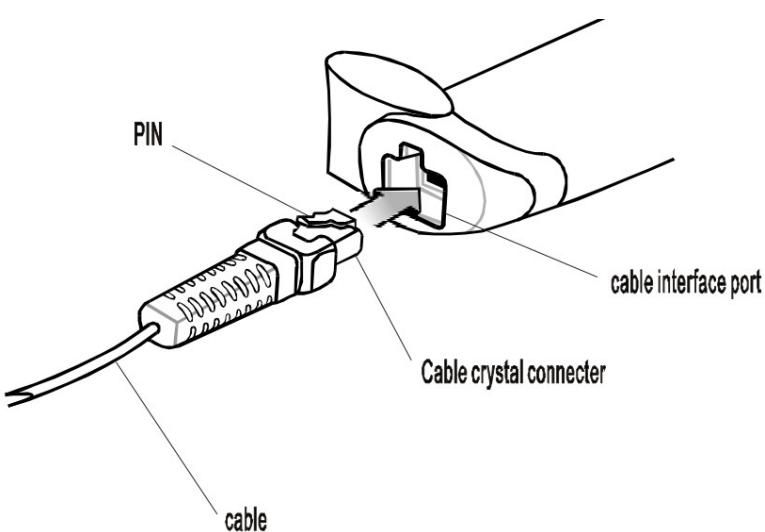
**Appearance:**



(figure 1)

## Installing the interface cable

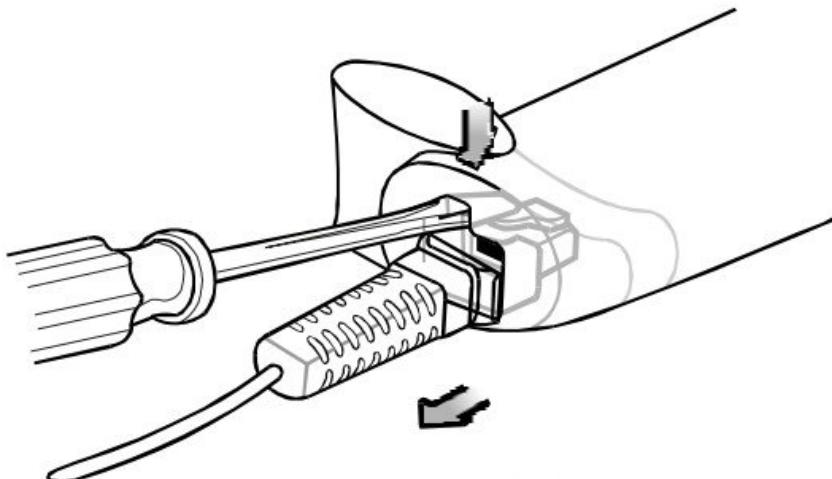
1. Plug the interface cable modular connector into the cable interface port on the bottom of the scanner handle (see figure 2)
2. Gently tug the cable to ensure the connector is properly secured
3. Connect the other end of the interface cable to the host



(figure 2)

## Removing the interface cable

- 1.Unplug the installed cable's modular connector by depressing the connector clip with the tip of a screwdriver
- 2.Carefully slide our the cable
- 3.Follow the steps for the interface cable on page to connect a new cable

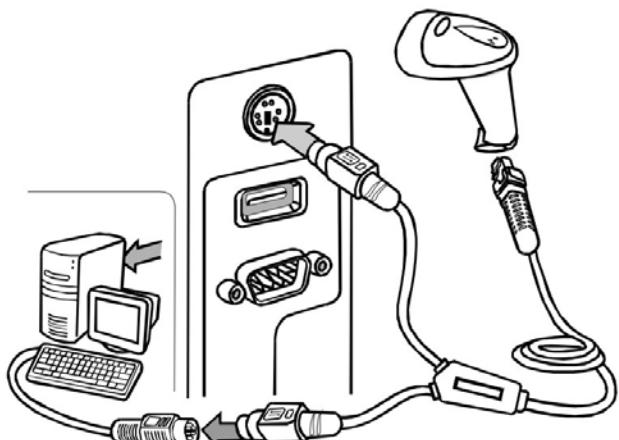


(figure 3)

## Cable Connection

### KBW Connection with Y-cable

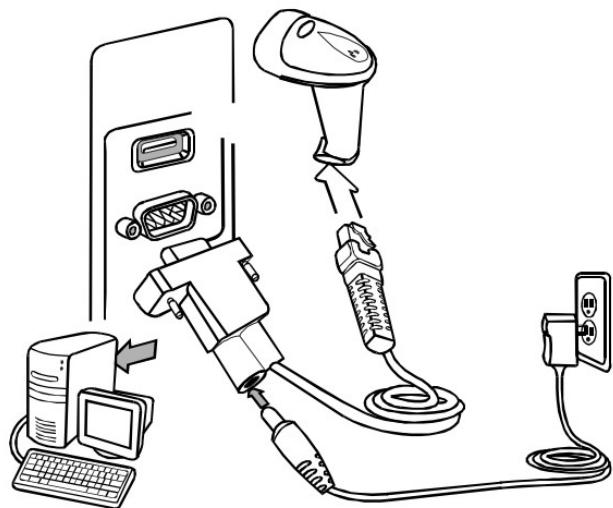
- 1.Switch off the host and unplug the keyboard connector
- 2.Connect the host female DIN keyboard connector of the Y-cable to the keyboard
- 3.Connect the round made DIN connector of the Y-cable to the keyboard port on the host device
- 4.Switch on your host system .The buzzer and led of scanner will have the remind signal of all connections are secure



(figure 4)

## RS-232 Direct Connection

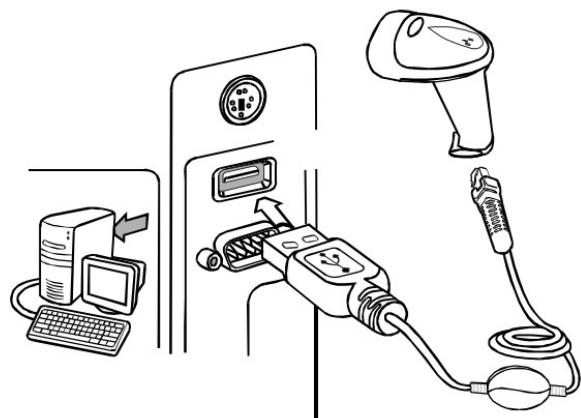
- 1.Switch off the host
- 2.Connect the RS-232 interface cable to bottom of the scanner
- 3.Connect the other end of the interface cable to the serial port on the host
- 4.If the equipment haven't power supply,please use the 5V power supply to the cable
- 5.Switch on your host system.The buzzer and led of scanner will have the remind signal if all connections are secure



(figure 5)

## USB connection

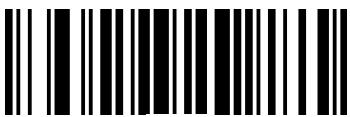
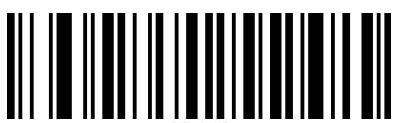
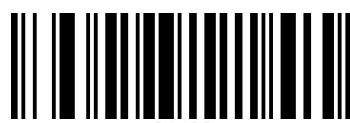
- 1.Connect the USD interface cable to the bottom of the scanner
- 2.Connect the other end of the interface cable to the host
- 3.The buzzer and LED of scanner will have the remind signal if all connections are secure
- 4.Windows will check the USB equipment automatically



(figure 6)

## Multiscan Functions

DISPLAY THE VERSION NO	
	 0A
RESTORE TO MANUFACTURER SETTING	
	 0B
OUTPUT MODE	
KBW MODE  000600	SERIAL MODE  000601
WAND EMULATION MODE  000602	RESET MODE  0B006
BUZZER/LED	
MUTE  014200	TURN ON  0B142
MEDIUM TONE  014301	POWER MODE  01451

<b>IMAGE SETUP</b>	
DECODE OPTIONS REVERSE IMAGE-ENABLE  01391	DECODE OPTIONS REVERSE IMAGE- DISABLE  01390
<b>ADD CODE ID</b>	
BEFORE CLOSE BARCODE TO ADD ID  01400	BEFORE OPEN BARCODE TO ADD ID  01401
AFTER CLOSE BARCODE TO ADD ID  0B140	BEFORE OPEN BARCODE TO ADD ID  01402
<b>SCANNING MODE</b>	
LASER/CCD MODE-RESET  013300	LASER/CCD MODE-SINGLE SCAN NO TRIGGER  013301
LASER/CCD MODE-MULTISCAN  013302	LASER/CCD MODE-MULTISCAN NO TRIGGER  013303
LASER/CCD MODE-AUTOMATIC CONTINUOUS SCAN  013304	LASER/CCD MODE-AUTOMATIC TWINKLE  013305
<b>Interface – KBW</b>	
<b>PC INPUT MODE</b>	
WEDGE MODE-AUTODETECT  000200	WEDGE MODE-SCAN SET2PASS THRU  000204

<b>Transmit Speed</b>	
<b>TRANSMIT SPEED – 0</b>  0000000	<b>TRANSMIT SPEED – 25</b>  0000025
<b>KBW LANGUAGE</b>	
<b>KEYBOARD COUNTRY-USA</b>  0005000	<b>KEYBOARD COUNTRY-GERMANY</b>  0005010
<b>KEYBOARD COUNTRY-FRANCE</b>  0005009	<b>KEYBOARD COUNTRY-RESET</b>  0005025
<b>Interface – Serial-1</b>	
<b>BAUD RATE</b>	
<b>2400</b>  000703	<b>4800</b>  000704
<b>9600</b>  000705	<b>19200</b>  000706
<b>HAND SHAKE PROTOCOL</b>	
<b>SERIAL HANDSHAKE-NONE</b>  001200	<b>SERIAL HANDSHAKE-XON/OFF</b>  001201
<b>SERIAL HANDSHAKE-RTS/CTS</b>  001202	<b>SERIAL HANDSHAKE-ACK/NAK</b>  001203

SERIAL HANDSHAKE TIMEOUT-2 SECONDS  0013020	SERIAL HANDSHAKE TIMEOUT-5 SECONDS  0013050
<b>Interface – Serial-2</b>	
DATA BIT	
SERIAL DATA BITS-8  00081	SERIAL DATA BITS -7  00080
<b>END BIT</b>	
SERIAL STOP BITS - 1  00090	SERIAL STOP BITS - 2  00091
<b>PARITY CHECK</b>	
SERIAL PARITY - NONE  001000	SERIAL PARITY - ODD  001001
SERIAL PARITY - EVEN  001002	SERIAL PARITY - MARK  001003
SERIAL PARITY - SPACE  001004	SERIAL PARITY - RESET  0B010
<b>Interface – WAND</b>	
<b>BARCODE 128</b>	

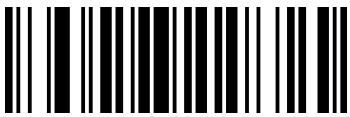
CODE 128 WAND EMULATION - ENABLE	CODE 128 WAND EMULATION - DISABLE
 00141	 00140
<b>SPEED</b>	
WAND EMULATION SPEED-FASTEAST (0)	WAND EMULATION SPEED-SLOWEST (3)
 001500	 001503
<b>BAR LEVEL</b>	
WAND EMULATION-BAR=1(HIGH)	WAND EMULATION-BAR=0(LOW)
 00161	 00160
<b>CODE 11</b>	
CODE 11-ENABLE	CODE 11 - DISABLE
 01261	 01260
<b>CODE 39</b>	
CODE 39 ENABLE	CODE 39 - DISABLE
 00221	 00220
FULL ASCII ENABLE	FULL ASCII DISABLE
 00231	 00230
<b>BARCODE On/Off</b>	
<b>CODE 93</b>	
CODE 93 – ON	CODE 93 - OFF
 00621	 00620

<b>CODE128</b>	
CODE 128 - ON   00691	CODE 128 - OFF   00690
CODE 128 ISBT - ON   00701	CODE 128 ISBT - OFF   00700
<b>CODABAR</b>	
CODABAR - ON   008851	CODABAR - OFF   00850
<b>INTERLEAVED 2 OF 5</b>	
12 OF 5 -ON   00961	12OF5 - OFF   00960
<b>INDUSTRIAL 2 OF 5</b>	
ID2OF5- ON   01061	ID2OF5 - OFF   01060
<b>MSI/PLESSEY</b>	
MSI - ON   01151	MSI - OFF   01150

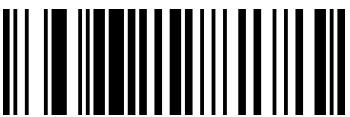
UPC/EAN	
UPC—A ON  00341	UPC—A OFF  00340
UPC—E ON  00351	UPC—E OFF  00350
EAN—13 ON  00361	EAN—13 OFF  00360
EAN—8 ON  00371	EAN—8 OFF  00370

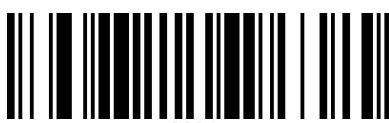
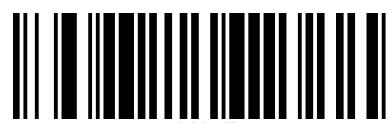
### BARCODE SYMBOL Set Up - 1

#### CODE 11

CODE 11 ID CHARACTER-'m'  0131m	CODE 11 ID CHARACTER'z'  0131Z
CODE 11 LASER/CCD REDUNDANCY - ENABLE  01321	CODE 11 LASER/CCD REDUNDANCY - DISABLE  01320

#### CODE 39

CODE 39 SS CHAR - NONE  002700	CODE 39 SS CHAR+'  002704

CODE 39 SEND STAR/STOP CHARS ENABLE  00281	CODE 39 SEND START/STOP CHARS DISABLE  00280
CODE 39 ID CHARACTER 'a'  0031a	CODE 39 ID CHARACTER 'z'  0031Z
CODE 39 LASER/CCD REDUNDANCY ENABLE  00331	CODE 39 LASER/CCD REDUNDANCY DISABLE  00330

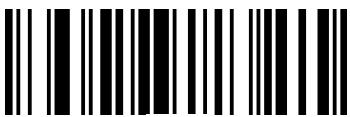
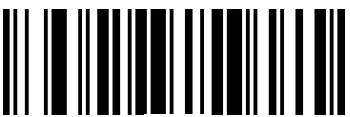
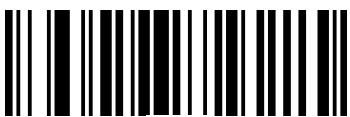
## BARCODE SYMBOL Set Up - 2

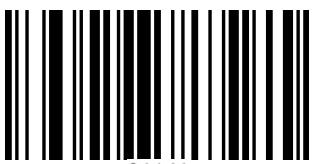
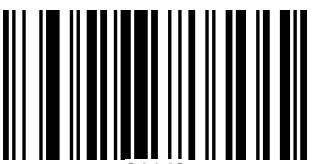
### CODE 93

CODE 93 ID CHARACTER 'h'  0066h	CODE 93 ID CHARACTER 'z'  0066Z
CODE 93 LASER/CCD REDUNDANCY-ENABLE  00681	CODE 93 LASER/CCD REDUNDANCY-DISABLE  00680

### CODE 128

CODE 128 ID CHARACTER 'g'  0081g	CODE 128 ID CHARACTER 'z'  0081Z
CODE 128 LASER/CCD REDUNDANCY-ENABLE  00841	CODE 128 LASER/CCD REDUNDANCY- DISABLE  00840

<b>CODABAR</b>	
CODABAR SEND START/STOP CHARS-ENABLE  00861	CODABAR SEND START/STOP CHARS-DISABLE  00860
CODABAR WIDE GAPS ALLOWED-ENABLE  00901	CODABAR WIDE GAPS ALLOWED- DISABLE  00900
<b>BARCODE SYBOL Set Up - 3</b>	
<b>CODABAR</b>	
CODABAR ID CHARACTER-k  0094k	CODABAR ID CHARABTER-z  0094Z
CODABAR LASER/CCD REDUNDANCY-ENABLE  00951	CODABAR LASER/CCD REDUNDANCY-DISABLE  00950
<b>Interleaved 2 of 5</b>	
12OF5 ID CHARACTER-i  0104i	12OF5 ID CHARACTER-z  0104Z
12OF5 LASER/CCD REDUNDANCY-ENABLE  01051	CODABAR LASER/CCD REDUNDANCY-DISABLE  01050
<b>Industrial 2 of 5</b>	
ID2OF5 ID CHARACTER-j  0113j	ID2OF5 CHARACTER-z  0113Z

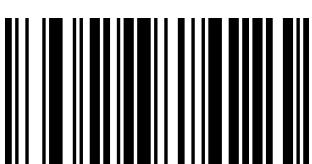
ID2OF5LASER/CCD REDUNDANCY-ENABLE	ID2OF5LASER/CCD REDUNDANCY-DISABLE
 01141	 01140

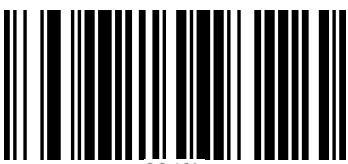
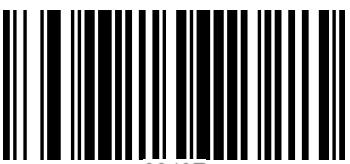
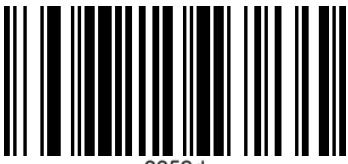
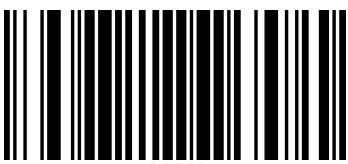
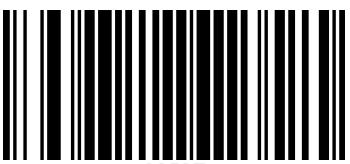
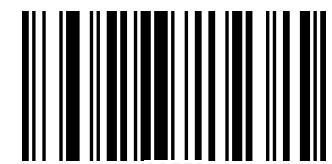
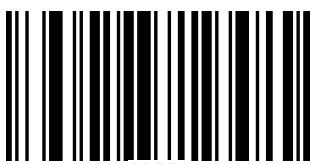
## BARCODE SYMBOL Set Up - 4

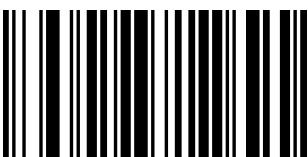
### MSI/PLESSEY

MSI ISBN ID CHARACTER-f	MSI ISBN ID CHARACTER-z
 0066h	 0053Z
MSI LASER/CCD REDUNDANCY-ENABLE	MSI LASER/CCD REDUNDANCY-DISABLE

### UPC/EAN

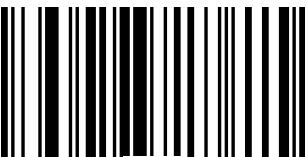
EXPAND UPC-E TO UPC-A ENABLE	EXPAND UPC-E TO UPC-A DISABLE
 00381	 00380
EXPAND UPC-A TO EAN-13 ENABLE	EXPAND UPC-A TO EAN-13 DISABLE
 00391	 00390
CONVERT EAN-13 TO ISBN ENABLE	CONVERT EAN-13 TO ISBN DISABLE
 00481	 00480

UPC-A ID CHARACTER-b  0049b	UPC-A ID CHARACTER-z  0049Z
<b>BARCODE SYBOL Set Up—5</b>	
<b>UPC/EAN</b>	
UPC-E ID CHARACTER-c  0050c	UPC-E ID CHARACTER-z  0050Z
EAN-13 ID CHARACTER-e  0051e	EAN-13 ID CHARACTER-z  0051Z
EAN-8 ID CHARACTER -d  0052d	EAN-8 ID CHARACTER -z  0052Z
ISBN ID CHARACTER -f  0053f	ISBN ID CHARACTER -z  0053Z
UPC/EAN SUPPLEMENTS-DISABLE  00550	UPC/EAN SUPPLEMENTS-2DIGIT ONLY  00551

UPC/EAN SUPPLEMENTS-5DIGIT ONLY	UPC/EAN SUPPLEMENTS-2DIGIT ONLY
 00552	 00553

## BARCODE SYBOL Set Up—6

### UPC/EAN

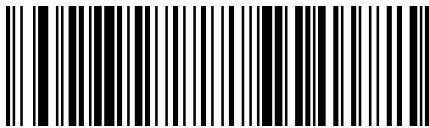
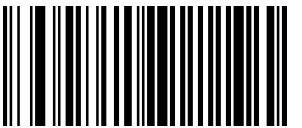
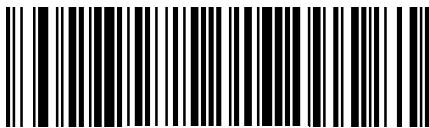
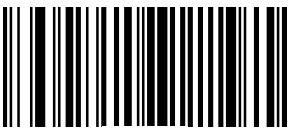
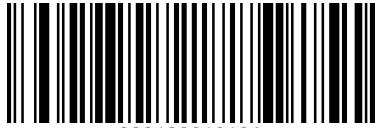
UPC/EAN LASER/CCD REDUNDANCY ENABLE	UPC/EAN LASER/CCD REDUNDANCY DISABLE
 00541	 00540

## EDIT SETUP BARCODES

EDIT #1 – STRIP 1 LEADING CHARACTER ON ALL BARCODES THAT START WITH '12345'	EDIT #1- OFF  0B20001
EDIT #2 – STRIP 1 TRAILING CHARACTER  020002020000001	EDIT #2 - OFF  0B20002
EDIT #1 – FILTER LEADING SPACES  020001030000032	EDIT #1 - OFF  0B20001
EDIT #1 – FILTER TRAILING SPACES  020001040000032	EDIT #1 - OFF  0B20001
EDIT – FILTER CHARACTERS  020000050000045	EDIT-DISABLE FILTERING OF ALL CHARS  0B20000050000045

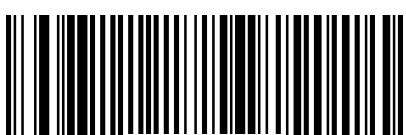
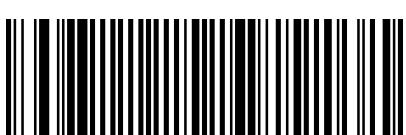
EDIT-INSERT LEADING ZERO	EDIT- DISABLE INSERT LEADING ZERO
 020000060000000048	 0B2000060000000048

### MACRO/SPECIAL KEYS SETUP BARCODES

MACRO #1-FIND'1'AND PRPLACE WITH'ONE'  02010101011ONE	MACRO #1-DISABLED  0B20101
MACRO #2-FIND'2'AND REPLACE WITH 'TWO'FOR CODE 39 ONLY  02010203012TWO	MACRO #2-DISABLED 换  0B20102
MACRO-FIND'0'AND REPLACE WITH'A'  02010001010A	MACRO-FIND'0'AND REPLACE WITH'A'-DISABLE  0B2010001010A
SPECIAL KEY-MAP F3 TO'0'  0162048	SPECIAL KEY-DISABLE F3 KEY MAPPING  0B162
SPECIAL KEY-MAP KEYPAD ENTER TO '2'  0182050	SPECIAL KEY-DISABLE KEYPAD ENTER MAPPING  0B182

### TERMINATION STRING SETUP BARCODES

STRING#1-TERMINATION CHAR-CR  0202011000\$0D	STRING#1-TERMINATION-LF  0202011000\$0A
---	---

STRING#1-TERMINATION CR+LF  0202011000\$0D\$0A	STRING#1-DISABLED  0B20201
STRING#2-CODE128TERMINATION CHAR-CR  0202021080\$0D	STRING#2-CODE 128TERMINATION CHAR-LF  0202021080\$0A
STRING#2-CODE128 TERMINATION CHAR-CR+LF  0202021080\$0D\$0A	STRING#2-CODE 128TERMINATION CHAR-LF  0B20202
STRING-CODE 39 TERMINATION CHAR-TAB  0202001020\$09	STRING-CODE39 TERMINATION CHAR-TAB-REMOVED  0B202001020\$09
STRING- ALL CODES PREAMBLE-STX  0202002000\$02	STRING-ALL CODES POSTAMBLE-ETX  0202003000\$03

## **Using The Advanced Setting Mode To Configure The Bar code**

### **Scanner**

The scanner can be configured by using the computer keyboard . The scanner must be installed and powered to enter the setting mode. Once the scanner is powered up ,please press and hold the following keys to finish setting

**Left-Control ,Caps Lock, Right-Shift ,and Backspace<sup>1</sup>**

**-or-**

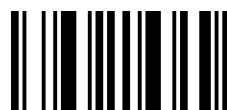
**Left-Control,F2,Right-Shift, and Backspace<sup>2</sup>**

Once you release the keys , the decoder will produce a series of beeps , change the LED to orange and display a message similar to the following on your display:

**F1-F10=Options, Use ARROW KEYS to Toggle/Move ,ESC=Exit**

To ensure that you have enough space on your command line for the scanner options to be displayed ,we recommend that you either have your command prompt located at the root directory or you load an editor with a new file. This will allow the scanner to use most of the characters on your computer display , for example,in Windows load ,Windows Write and in OS/2 load the Notepad program

**Note :** In addition to suing your keyboard to enter Setup Mode you may scan the barcode below



Enter Setup Mode

**Note:** This page is onlyfor KBW interface reader , never execute any action if you are using RS232 interface reader