

# 2D 扫描枪说明书 (英文版)

材质：封面128G铜版纸

内页：80G书写纸

成品尺寸：宽100\*高140mm

骑马钉装订

# **User Guide**

2D IMAGE Wireless Scanner

# CONTENTS

## Introduction **01**

Package includes  
Quick Guide  
Scanner LED  
Receiver LED  
NOTICE

## Common Settings (Wireless Part) **02-07**

Pairing operation  
Normal Mode  
Inventory Mode  
Battery Status  
Sleep times  
Buzzer setup  
Interface mode  
Suffix setting  
Languages  
Scanner ID  
Code ID & Code Data

## General Settings (2D Part) **08**

Return to default  
Reading mode  
Code ID as prefix  
Serial Baud Rate

## Code Symbol On/Off **09-12**

Code 11  
Code 128  
Code 39  
Full ASCII Code 39  
Code 93  
CODABAR  
Interleaved 2 of 5  
Industrial 2 of 5  
Standard 2 of 5  
Matrix 2 of 5  
MSI Plessey  
EAN-8/EAN-13/UPC-A/UPC-E  
GS1 DATABAR Limited  
GS1 DATABAR Expanded

Warranty

## FAQ **13**

Thank you for choosing our company's products, in order to have a better experience, please read this manual carefully.

## Introduction

### Package includes:

- 1 Scanner
- 1 USB receiver (to receive the bar code data)
- 1 Black USB cable (for charging only)
- 1 User guide

### Quick Guide:

1. Plug the USB receiver into the computer.
2. Open a text document (Notepad), or a Word file, put the cursor in it, and then scans any one-dimensional & 2D code, see if you successfully uploaded the barcode.

### Scanner LED

LED Indicator	status
Blue light flashes once	Scanned or setup successfully
Red light flashes once	Scan failed or transfer failed
Red light flashes three times	Remind you that you need to recharge it in time
No light on	No power
Blue light on Red light flashes	Charging (scanner connect with the receiver )

### Receiver LED

LED Indicator	status
Blue light flashes once	Scanned and transfer or setup successfully
Blue light off	No power ,please check the USB connect or not
Blue light flashes always	Receiver not connect with USB Port well
Green light on	Scanner connect with receiver well and paired
Green light on and flash always	Scanner connects with receiver but not pair with each other.

## NOTICE

Scanner can start normally, when the key is pressed, Blue light and red light will appear to bar code scanning, light and then off, hear ' well .... Click ' sound, but no bar code data displayed in the input box. Workaround

- 1 receiver is not plugged into your computer's USB port, make sure that the receiver is fully inserted into the USB port.
- 2 computers USB ports not working properly, please plug the USB

receiver into a different USB port on the computer to test it.

3 inserted does not pair the receiver and the scanner or scanner is set to "Inventory Mode", "virtual USB". Please unplug the USB plug of the receiver again, followed in order by, scan the following setting code (instructions), the "restore defaults" and pair the receiver then scan "USB\_HID keyboard mode"

4 the cursor is not in the input text box, make sure the cursor is in the input box, and scan bar codes.

5 If the USB receiver indicator light shows sink in good condition. If the USB receiver led is off or blinking, it means that the receiver is broken.

## Common Settings (Wireless part)

1. To restore factory Settings, scan the barcode below



Restore Defaults

2. Two Pairing modes: one to one or one to multiple scanner

### Pairing operation

One receiver, one scanner

- (1) Plug the USB receiver into your computer
- (2) Scan the bar code below to Pair the receiver



Pairing receiver

One receiver, multiple scanners

- (1) Plug the USB receiver into your computer
- (2) Use # 1 scanner, Scan the Pairing receiver Settings code above
- (3) Reconnect the receiver, Then use # 2 scanner to scan the Pair receiver Settings code
- (4) Retool the receiver and then use # 3 scanner to scan the Pairing receiver Settings code
- (5) By analogy, Pair the required scanner to a receiver.

3. Two upload mode:

**Normal Mode:** Instant upload data to your open document.

**Inventory Mode:** The barcode is scanned and stored in the scanner, and the data is uploaded to the device when needed.

(1) Set the scanner to instant upload mode and scan the barcode below



Normal Mode\*

(2) Set the scanner to Inventory mode and scan the barcode below



Inventory Mode

Scan the following code to upload the scanner data to the computer



Data transmission

Scan the following bar code to show the total number of bar codes



The total number of data

Scan the following code to clear the data stored in the scanner



Clear data (carefully use)

Scan the bar code below to select the speed to upload data



Fast upload speed



slow upload speed\*

4. Scan the following bar code to show the remaining power of the battery.



Battery Status

5. Sleep time setting: scan the following bar code and set sleep time



Sleep after 20 seconds\*



sleep after 15 minutes

### Buzzer Setup



Turn off the buzzer



The volume of medium\*



the volume is low



the volume is high

### Interface mode:



USB HID



USB virtual COM

### Suffix Setting



Suffix-CR\*



Suffix-CR+LF



Suffix-TAB



NONE

### LANGUAGES:



UNITED STATES\*



FRANCE



SERBIA/YUGOSLAVIA



BELGIUM



GERMANY



SLOVENIA



ID-03



ID CANCEL



BTAZIL



PORTUGAL



SPAIN



SWITZERLAND (GERMANY)



ITALY



UNIVERSAL

**SCANNER ID:**



ID-01



ID-02

**Code ID & Code Data**

Code Type	Code ID	Sing Address
Code 11	H	0x9D
Code 128	j	0x96
Code 39	b	0x97
Full ASCII Code 39	b	0x97
Code 93	i	0x98
CODABAR	a	0x99
Interleaved 2 of 5	e	0x9A
Industrial 2 of 5	D	0x9B
Standard 2 of 5	e	0x9A
Matrix 2 of 5	v	0x9C
MSI Plessey	m	0x9E
GS1	R	0x9F
GS1 Limited	R	0xA0
GS1 Expanded	R	0xA1
UPC-A	c	0x93
UPC-E0	c	0x94
UPC-E1	c	0x95
EAN-8	d	0x92
EAN-13	d	0x91
QR Code	Q	0xA2
Data Matrix	u	0xA3
PDF 417	r	0xA4

## General Settings ( 2D Part)



Return to default



Serial

Reading mode



Single scan\*



Continuous scan

Code ID



Code ID ON



Code ID OFF\*

Serial Baud Rate



9600bps\*



115200bps

Code Symbol On/Off

Code 11

Enable



Disable\*



Code 128

Enable\*



Disable



Code 39

Enable\*



Disable



Code 93

Enable\*



Disable



CODABAR

Enable\*



Disable



Interleaved 2 of 5

Enable



Disable\*



### Industrial 2 of 5

Enable



Disable\*



### UPC-A

Enable\*



Disable



### Matrix 2 of 5

Enable



Disable\*



### UPC-E0

Enable\*



Disable



### MSI Plessey

Enable



Disable\*



### UPC-E1

Enable\*



Disable



### EAN-8

Enable\*



Disable



### GS1 (RSS-14)

Enable



Disable\*



### EAN-13

Enable\*



Disable



### GS1 Limited (RSS-14 Limited)

Enable



Disable\*



## GS1Expanded (RSS-14 Expanded)

Enable



Disable\*



## ALL TYPE CODE ON



## PDF417

Enable\*



Disable



## Warranty

This scanner is warranty for 12 months from the data of the original purchase from authorized retailer and distributor. If the device fails due to a manufacturing defect, please contact authorized retailer and distributor.

## FAQ

Question 1: read the barcode, the barcode data will be lost?  
Solution: slow down the transmission speed of the bar code reader.

Question 2: bar code characters garbled words and wrong?  
Solution: set a bar code reader keyboard nations with using the keyboard.

Question 3: bar code cannot read?  
Solution: you can read this type of bar code decoder is closed, suggested that open set.  
Solution: barcode encoding is not correct, contact technical support.

Question 4: computer keyboard error in the boot process take place?  
Solution: disconnect the barcode reader, only connect the keyboard restart the computer.

Question 5: when the barcode scanner connected to the PC serial port, can't obtain boot prompt?  
Solution: PC serial port fails to provide power supply, to an external 5v power supply.

Question 6: when the barcode scanner after receiving a PC, a voice prompt, but no data transfer?  
Solution: output pins or communication error. Check the output pins, to Pair the current PC.

Question 7: decoding with voice prompt, but cannot be transmitted to the computer?  
Solution: interface is wrong, to find the interface Settings.

Question 8: can't find to set function of bar code?  
Solution: bar code can be set according to the content production need.

## QR Code

Enable\*



Disable



## DM Code

Enable\*



Disable



## CODABAR START/STOP Chars

Enable



Disable\*

