

Portable Stocktaking Terminal

User Manual

PART I	BRIEFING.....	2
1.1	Package List.....	2
1.2	Safety Cautions	2
1.3	Battery Charging.....	2
PART II	FUNCTIONS & OPERATIONS	5
2.1	Overview	5
2.2	Scanner	6
2.3	Inventory	7
2.4	Serial number.....	8
2.5	System Settings.....	9
2.6	Communication.....	9
2.7	Update	9







PART I. BRIEFING

1.1 Package List

1. One portable stocktaking terminal;
2. One wireless USB mini-receiver;
3. One charger;
4. One CD (contains User Manual, PC Application, Receiver Driver and Receiver Installation Guide)

1.2 Safety Cautions

Please read the following concise rules. Violation of these rules may cause danger or infringement of the law.

-  Fare use: the stocktaking terminal can be only used in the purpose described in this manual.
-  Maintenance: only technically qualified person can disassemble the terminal.
-  Accessories and battery: use only approved accessories and battery. Don't connect to inconsistent products.
-  Water-proof: the terminal is not water-proof, please keep it dry.
-  Data backup: please make a backup for the data saved in the terminal.
-  Connection: If in need of connecting to other devices, please obtain necessary safety instructions from the manual or manufacturer. Never connect to an inconsistent device.

1.3 BATTERY CHARGING

1.3.1 battery icon: a battery icon displays on top right of the screen to show the battery power. When the battery is running low, the icon blinks. As the battery level going too low to maintain any operation, the Stockcount shuts down automatically.

1.3.2 battery charging: simply plug one end of the charger into the power outlet and the other end into the stocktaking terminal.

PART II. FUNCTIONS & OPERATIONS

2.1 Overview



1. SCREEN
2. UP ARROW KEY
3. OK : Confirm an operation
4. SCAN: scan a barcode
5. DOWN ARROW KEY
6. Key 1: switch to manual input states or output '-' in alphabet mode
7. INPUT SWITCH: valid only in manual input states.
Long press to select symbols
Short press to switch among number/capital letter/small letter
8. POWER BUTTON
9. F2: switch between AUTO and MANUAL mode at Inventory operation
10. CANCEL/DELETE: Cancel an operation or return to last menu or used as BackSpace key at manual input states
11. BUZZER
12. SCAN WINDOW
13. BATTERY COVER
14. CHARGING PORT


2.1.1 BOOTUP

Make sure the battery is properly loaded and fully charged. Long press the POWER BUTTON until a beep sounds to indicate the startup of the terminal.

2.1.2 SHUTDOWN

In the main screen, hold down the POWER BUTTON for 2 seconds to turn off the stocktaking terminal.

2.2 Scanner

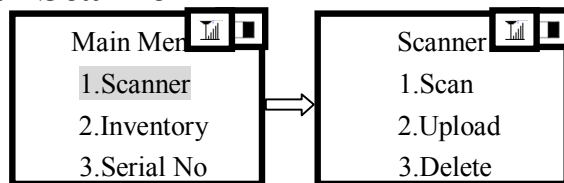

Operation:


Step 1: Click “connection” on the terminal, then connect the receiver to the computer, wait for showing base station connected successfully;

Step 2: Open the TXT text from PC, confirm the cursor in the text;

Step 3: select “wireless scanner”, click “scan”, press SCAN to scan the barcode, When it has signal, the barcode displayed directly in the TXT text, as shown:




2.2.1.Scan

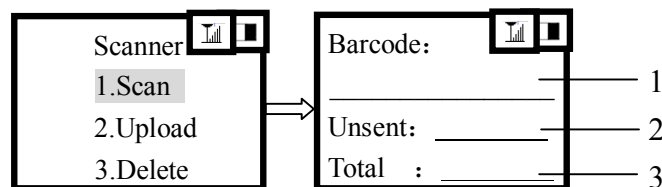

1. Barcode display and input area
2. Number of unsent
3. Total number of barcode scanned

2.2.2.Upload

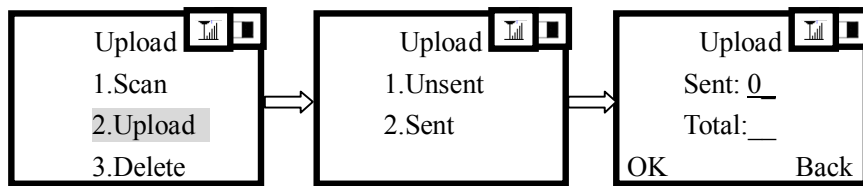

Press OK to wirelessly upload data unsent or sent.

2.2.3.Delete

Warning!
Press OK to continue!
OK Back

Delete all data in Scanner operation.

2.3 Inventory

2.3.1.Scan:

Barcode: 6912345678901
count: 10
LOT #: 001

1
2
3

1. Barcode display and input area
2. The cumulative number of the current barcode, the default is 1, press F1 switch to manual input states
3. Manual input Warehouse number

Input the warehouse (with memory) or Lot No. (manual input), select warehouse or Lot No. in advanced settings.

Note: The serial number is not the real-time upload, after scanning, select "upload" to upload data.

Press the up arrow key can query the data which is unsent and hasn't delete. Press the up and down arrow keys to browse, press the power button to delete certain data. As shown below:

Barcode: 3 6912345678901
count: 1
WH #:

2.3.2.Upload:


Same as Scanner mode.




2.3.3.Delete:

Delete all data in Inventory operation.

2.4 Serial number

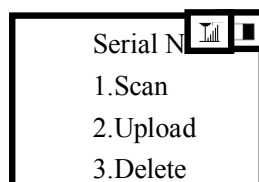

1.Scan

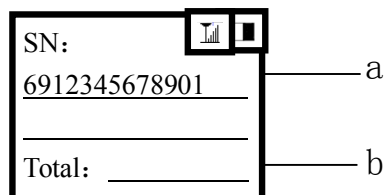

- a. Serial number display and input area. The barcode here is unique, the repeated barcode is not preserved.
- b. The record number of the current serial number. The total number resets after exit the scan interface.

Note: The serial number is not the real-time upload, after scanning, click "upload" to upload data

2.Upload


Same as wireless scanner. Open the TXT text from PC, confirm the cursor in the text, and then press OK to start uploading, as shown:



3.Delete:


Delete all data in Serial number operation.

2.5 System Setting

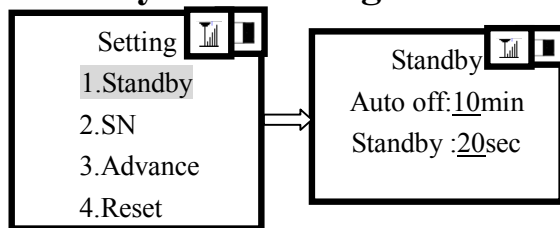

- 1.Standby: set up auto off time and standby time
- 2.SN: machine code
- 3.Select Warehouse mode or LOT mode
- 4.Reset: restore factory defaults

2.6 Communication

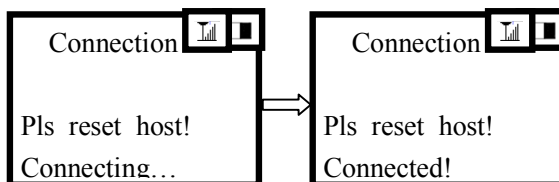

Insert the receive into USB port after enter “5.Connect”.

2.7 Update

Check the current version, press F2 to update.

- a. Press F2 after enter the update interface, wait until it shows “wait for cmd”
- b. Connect the cable, open the program on PC, select the update file, and then click Download the program, which began updating.
- c. The stocktaking terminal will reboot after update success.

