

OCPP-88A-W

[illegible]

□□□□	□□□□□□
□□□□	576dots / □□□□□□512dots / □; □□□□□□□□24x24□□□□18030□□□□□□□□□□□□□□□□□ANK□;
□□	□□12 * 24dots□1.5□W□* 3.0□□□mm; B□9 * 17dots□1.1□□□* 2.1□□□mm □□/□□□24 * 24dots□3.0□W□* 3.0□□□mm
□□□□	JUPC-A / UPC-E / JAN13□EAN13□/ JAN8□EAN8□/ CODABAR / ITF / CODE39 / CODE93 / CODE128□QR□
□□□□	250□□/□□□□□□□□□□300mm / □□□□□□□□□□
□□	USB□USB + □□□USB + LAN□USB + □□+ LAN□□□□□+ USB□□□+ USB + LAN
□□□□	□□EPSON ESC / POS□□
□□	□Win9X / □□XP / WIN2000 / Win2003□/□VISTA / Win 7□/□8 / win8.1 / Linux□□□□□□ESPON□SDK □Android□□□□
□□□□	79.5±0.5□□□□□□□72□
□□□	83□□
□□□□	0.06-0.08mm
□□□	□□□□□□□□□□
□□□□□	□□□□
□□	DC24V / 2.5A
□□	0-45□□□□
□□□□□□	10-80□
□□□□	190 * 145 * 145□MM□
□□	1.60□□

	P / N	
	OCPP-88A-U	USB
	OCPP-88A-UR	USB +
	OCPP-88A-UL	USB + LAN
	OCPP-88A-URL	USB + + LAN
	OCPP-88A-W	+ USB
	OCPP-88A-BUL	+ USB + LAN
	OCPP-88A-U0	USB
	OCPP-88A-UR0	USB +
	OCPP-88A-UL0	USB + LAN
	OCPP-88A-URL0	USB + + LAN
	OCPP-88A-W0	+ USB
	OCPP-88A-BUL0	+ USB + LAN

