



□□□□	P / N	□□
	OCPP-88A-U	USB□□□□□□□□
	OCPP-88A-UR	USB + □□□□□□□□
	OCPP-88A-UL	USB + LAN□□□□□□□□
	OCPP-88A-URL	USB + □□+ LAN□□□□□□□□
	OCPP-88A-W	□□+ USB□□□□□□□□
	OCPP-88A-BUL	□□+ USB + LAN□□□□□□□□
	OCPP-88A-U0	USB□□□□□□□□
	OCPP-88A-UR0	USB + □□□□□□□□
	OCPP-88A-UL0	USB + LAN□□□□□□□□
	OCPP-88A-URL0	USB + □□+ Lan□□□□□□□□
	OCPP-88A-W0	□□+ USB□□□□□□□□
	OCPP-88A-BUL0	□□+ USB + LAN□□□□□□