

OCPP -88A

80pos

- 11

□□□□	□□□□
□□□□	576□/□□□□□□512□/□; □□□□□□□□24x24,18030□□□□□□□□□□□□□□□□□□ANK□□;
□□	A□12 * 24□□1.5□W□* 3.0□H□mm; B□9 * 17□□1.1□□□* 2.1□□□mm □□/□□□24 * 24□□3.0□□□* 3.0□□□mm
□□□□□	JUPC-A / UPC-E / JAN13□EAN13□/ JAN8□EAN8□/ CODABAR / ITF / CODE39 / CODE93 / CODE128□QR□
□□□□	250 mm / sec□□□□□□□□300mm / sec□□□□□□□□
□□	USB□USB + □□□USB + LAN□USB + □□+□□□□□□+ USB□□□+ USB + LAN
□□□□	□□EPSON ESC / POS□□
□□	□Win9X / Window XP / Win VISTA / WIN2000 / Win2003 / Win / Win 7 8 / win8.1 / Linux□□ □ESPON□SDK□□□□Android□□□□□□
□□□□	79.5±0.5 mm□□□□□72□
□□□□	83□□
□□□□	0.06-0.08mm
□	□□□□□□□□□
□□□□□	□□□□□
□□	DC24V / 2.5A
□□	0-45□□□□
□□□□	10-80□
□□□□	190 * 145 * 145□MM□
□□	1.60□□

	P / N.	
	OCPP -88A-U	USB
	OCPP -88A-UR	USB +
	OCPP -88A-UL	USB + LAN
	OCPP -88A-URL	USB + + LAN
	OCPP -88A-W	+ USB
	OCPP -88A-BUL	+ USB + LAN
	OCPP -88A-U0	USB
	OCPP -88A-UR0	USB +
	OCPP -88A-UL0	USB + LAN
	OCPP -88A-URL0	USB + + Lan
	OCPP -88A-W0	+ USB
	OCPP -88A-BUL0	+ USB + LAN



*

*

*

*WinXP Win2000 WinVista Win8-32bit

*Win8-64bit

*[Linux](#)

*

*[USB Printdemo](#)

*[SDK](#) Android

*