



□□□□	P / N	□□
	OCPP -88A-U	USB□□□□□□□□
	OCPP -88A-UR	USB + □□□□□□□□
	OCPP -88A-UL	USB + Lan□□□□□□□□
	OCPP -88A-URL	USB + Serial + Lan□□□□□□□□
	OCPP -88A-W	Wifi + USB□□□□□□□□
	OCPP -88A-BU	□□+ USB□□□□□□
	OCPP -88A-U0	USB□□□□□□□□
	OCPP -88A-UR0	USB + □□□□□□□□
	OCPP -88A-UL0	USB + Lan□□□□□□□□
	OCPP -88A-URL0	USB + Serial + Lan□□□□□□□□
	OCPP -88A-W0	Wifi + USB□□□□□□□□
	OCPP -88A-BU0	□□+ USB□□□□□□