


OCBP-M80

Portable Thermal Printer

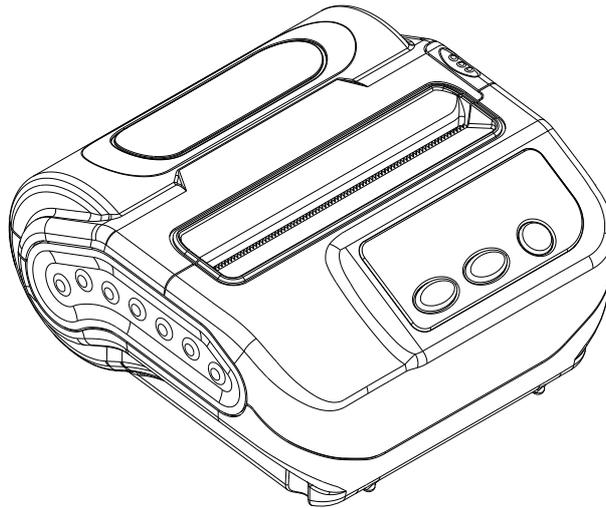

User's Manual

Content

Notice.....	3
Notice on Safety.....	3
Notice of Using.....	3
Notice of Storing	3
Chapter1 Outer Appearance and Model No.....	4
1.1 Outer Appearance.....	4
1.2 Model No.....	5
Chapter2 Characteristic Capability.....	5
2.1 Printing Capability.....	5
2.2 Other Capability.....	6
Chapter3 Operation Method.....	7
3.1 Using Preparation.....	7
3.1.1 Battery Installation.....	7
3.1.2 Paper Roll Installation.....	7
3.2 Basic Function Usage.....	8
3.2.1 Switch On	9
3.2.2 Switch Off.....	9
3.2.3 Paper Feeding (Manual Feeding).....	9
3.2.4 Self Test.....	9
3.2.5 Hexadecimal Printing.....	9
3.2.6 Printer Parameters Setting.....	9
3.2.7 Battery Charging.....	10
3.3 Printer Parameters Setting.....	10
3.4 Printer Interface Connection and Printing.....	10
3.4.1 USB Connection.....	10
3.4.2. Bluetooth Connection.....	10
3.4.3 Bluetooth Address Binding.....	11
3.5 Explanation of Indicator and Buzzer.....	11
3.6 LCD indication.....	12
Chapter4 Other Information	13
4.1 Printer Developing Manual.....	13
4.2 Description of Black Mark Pre-print.....	13
Appendix A.....	14
Appendix B.....	16

NOTICE

Please read this manual carefully before using the printer!

Notice of Safety

Be sure to use the specified battery and power supply provided by our company. Otherwise it may cause fire, explosion or damage printer, meanwhile, the battery also may be damaged.

Don't put battery into the fire, don't disassemble or heat the battery, don't be short circuit, it may cause fire, explosion or damage printer, meanwhile, the battery also may be damaged.

If the printer would not be used for a long time, be sure to take off the battery, otherwise the battery may leak liquid which is corrosive liquid, if improper operation causes battery leak liquid, and it paste in the skin or clothes, please rinse it by clean water, if paste in the eyes, please rinse them thoroughly by clean water and see a doctor. Please do not open the paper case cover when it is printing or just when printing is finished, do not touch the printer head with hand or body, overheat may cause scald.

Notice of Using

Water or other liquid should not be spilled into the printer, also the printer should not be appeared in the rain, or else may cause printer damage. Please do not open the paper case cover when it is printing, otherwise the printer may work improperly. If printer is using USB connection to work, should not unplug the USB cable, or else some printing data may be lost. When printer is using USB connection to work, the distance of communication should be within 10 meters, otherwise the printer doesn't print or prints rubbish codes. Too high (45°C) or too low (5°C) environment temperature and too high (85%) or too low (20%) environment humidity both effect the printing quality. The printer paper roll with poor quality or stored for too long time also may reduce the printing quality even damage the printer. Under the black mark detecting mode, the printer requires that the pre-printed black mark is accordant with the printing rule of black mark (please refer to details in Chapter 4.2), otherwise the black mark can not be detected correctly. Be sure to use up the power of the battery before charge up it, as it can ensure the using life of the battery.

Notice of Storing


The printer should be placed in such an environment that the temperature is between -40°C and 70°C, and the relative humidity is between 10% and 95%. If the printer will be stored for a long time, please be sure to take out the battery, otherwise may damage the battery and printer.

Normal thermal paper receipt can't be kept too long, if you need to keep the receipt for a long period, please choose long-term effective thermal paper. The thermal paper should be keep away from high temperature environment and point-blank sunshine,

please store it where is away from light if it have been open.

Chapter 1 Outer Appearance and Model No.

1.1 Outer Appearance

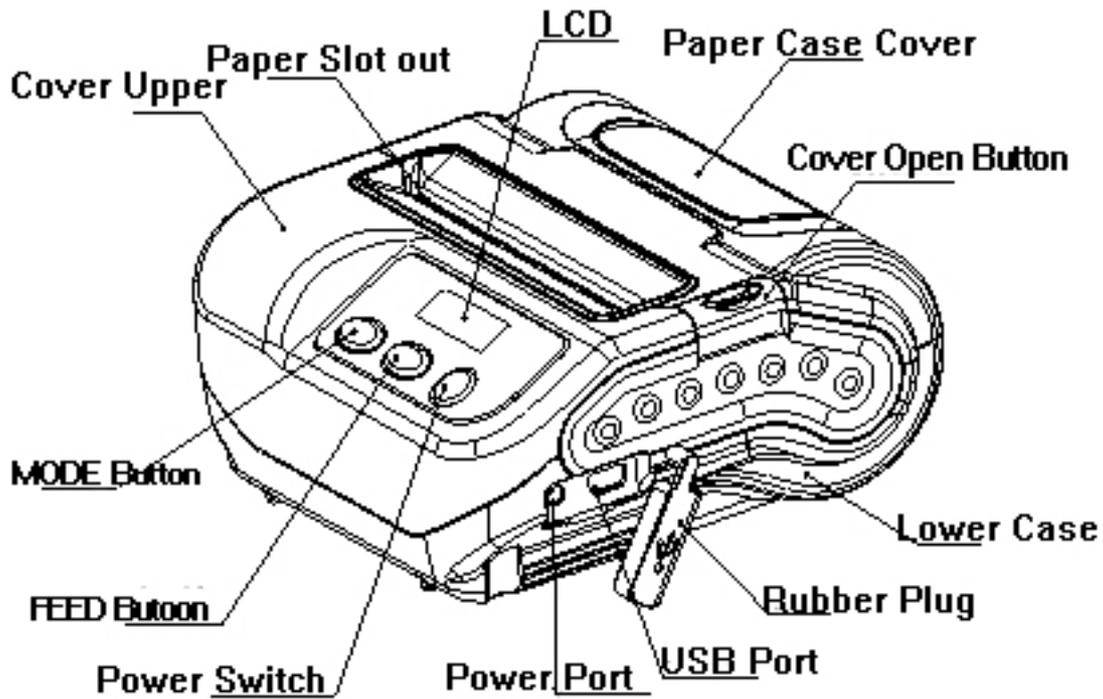

[CHARGE]: Battery Charging Indicator

[ERROR]: Error Indicator

[FEED]: Feed Button

[MODE]: Mode Button

1.2 Model No.

OCBP-M80

Support USB and Bluetooth Interface as default

Chapter 2 Characteristic Specification

2.1 Printing Specification

Print	Printing Method	Thermal line
	Printing Speed	80mm/s (Thermal Paper); 67mm/s (Label Paper)
	Resolution	8dots/mm (203dpi) 79.5mm:576dots/line; 58mm:384dots/line; 44mm:300dots/line.
	Effective Printing Width	72mm; 48mm; 37.5mm
Character	Character Set	ASCII,GB2312-80(Chinese)
	Printing Font	ANK: 12 x 24Chinese: 24 x 24
	Character per Line	48
Paper Spec	Paper Type	Thermal paper
	Paper Width	72mm; 48mm; 37.5mm
	Paper Roll Diameter	Max: 40.0mm
	Roll Core Inner Diameter	13mm(min.)
	Paper Thickness	60~85μm
Paper Supply Method		Drop-in easy loading
Reliability	MCBF	15 million lines
	TPH	100km
Barcodes		UPCA,UPCE,EAN13,EAN8,CODE39,ITF25, CODABAR,CODE93,CODE128 PDF417,QR CODE,DATA Matrix
Emulation		ESC/POS
Driver		Windows 98 / 2000 / NT / XP / VISTA/Win7/Win8/windows Mobile /windows CE/Linux
Sensor		Paper End Sensor
Interface		USB+Bluetooth
Power Adaptor		9V DC/2A
Battery Power		7.4V DC, 1.4A rechargeable Li-ion battery

Battery duration	100m continuous printing
Physical Weight	380g(excluding roll paper)
Dimension(W×L×H)	105(L)X109(W)X51(H)mm
Color	Black
Environment Operating Temp	0°C~50°C
Storage Temp	-40°C~70°C
Operating Humidity	10%~80%
Storage Humidity	10%~95%

2.2 Other Specification

- Paper Loading Method: drop-in easy loading (please refer to details in 3.1.2 Paper Roll Installation).
- Black Mark Location: available(details please see 4.2 pre-printing black mark manual).
- Paper End Detection: when paper is out, the ERROR Indicator will constant on lighting, The buzzer rings when it is printing, and it will stop printing.
- Printing Control Command: ESC/POS compatible command set (refer to<M80 Printer Developer Manual >).
- Power Supply: 7.4VDC/1450mAh rechargeable polymer lithium battery.
- Power Alarm: when the battery is low, the battery indicator on LCD blinks
- Battery Charging: quick charging ,it will be charged full about 4 hours;
- Battery Duration: under25% printing density ,at least 120 meters, the standby time is over 100 hours.


These parameters are just for reference, long term usage will cause the capacity decline, and can not ensure the time of printing.

Chapter 3 Operation Method

3.1 Using Preparation


3.1.1 Battery Installation

1. Put the battery into the battery slot from the side with pins and press the other side into case. (as below Pic.)

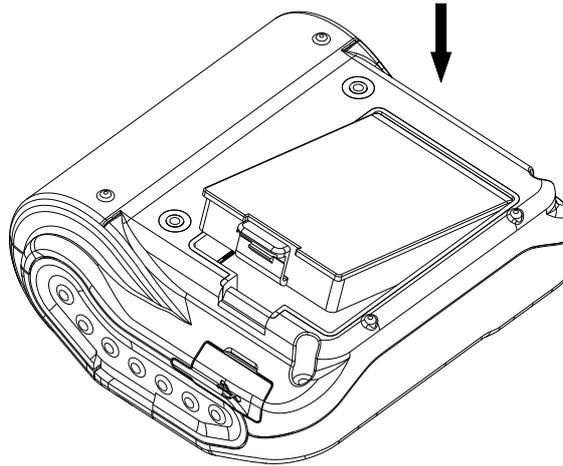

3.1.2 Paper Roll Installation


1. Hold both sides of the paper case cover, and open it. (Pic.1)
2. Pay attention to use paper that effective printing side is outside in the printing paper face when you enchase the new paper roll. (Pic.2)
3. Pull out a part of paper and put them in the middle of the paper out orifice. (Pic.2)
4. Shut down paper case cover and cut off the redundant paper
5. Use the Optional Paper Holder (80mm/57mm/44mm), put paper roll with different width into the holder accordingly. Repeat Step 3~4.

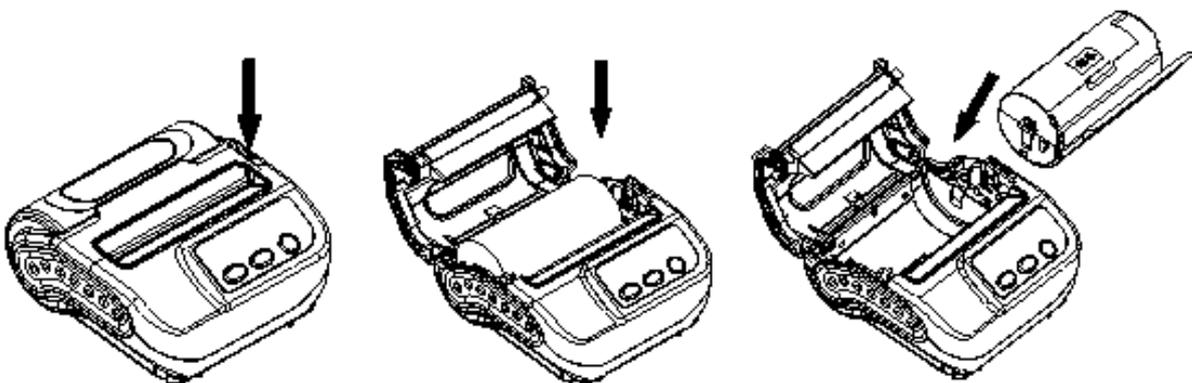

(Pic.1)

(Pic.2)

(Pic.3)

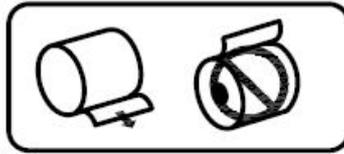

3.2 Basic function usage

Printing Mode: Standard Mode and Logistics Mode.

Paper Type: Thermal paper, Black mark paper and Label paper.

Logistics Mode: Way Bill online mode, Receipt online mode, Invoice online mode. Label paper (79.5mm width) as default under Way bill mode. Receipt paper (58mm width) as default under Receipt mode. Black mark paper (44mm width) as default under Invoice model.

Standard Mode: Standard 80mm mode, Standard 58mm mode, Standard 44mm mode. Standard thermal paper as default under Standard mode.

Set the Printing mode and Paper type by Setting Tool (Way Bill mode and Invoice mode)

3.2.1 Switch On

Press **【POWER】** button about 1 second later you will hear 'one low one high 'prompt tone. The LCD shows "Loading...", then the printer turns into work mode when loosen the **【POWER】** button. The LCD shows printer parameter.

3.2.2 Switch Off

Under status of switch on,the printer will send out the prompt tone of 'one low one high ' after pressed the **【POWER】** button for 1 second, the LCD turns off, then loosen the **【POWER】** button, the printer is off.

3.2.3 Paper Feeding (Manual Feeding)

A. Standard Mode:

Under the normal work status and apply to thermal receipt paper, press **【FEED】** button, the paper feeding begins, and stop when loosen **【FEED】** button. When the printer apply to black mark paper and label paper, press **【FEED】** button, the printer begins to feed paper and stops over the position of black mark/label spacing. If the paper is not the black mark/ label paper, the printer stops automatically after feeds paper for 26cm. And alarm the error of paper end for label paper.

B. Logistics Mode:

Under the normal work status and apply to receipt, press **【FEED】** button, the paper feeding begins, and stop when loosen **【FEED】** button. When the printer apply to invoice and waybill, press **【FEED】** button, the printer begins to feed paper and stops over the position of black mark/label spacing. If the paper is not the black mark/ label paper, the printer stops automatically after feeds paper for 26cm. And alarm the error of paper end for waybill.

3.2.4 Self-Test

After receiving the printer, user can check its current setting and status at anytime. Self-test way is as below: Power off, then hold down the **【FEED】** button and press the power button at the same time. Then loosen the **【FEED】** button when you hear 'one low one high' prompt tone and LCD shows "Loading...", the current setting and status will be printed out.

3.2.5 Hexadecimal Printing

The function of hexadecimal printing is to print the information received from host machine by hexadecimal numbers and corresponding characters. It will be convenient to debug application.

Into hexadecimal printing: Power off, hold down the **【MODE】** button and press the power button at the same time. Then loosen the power button and press the **【FEED】** button when you hear 'one low one high' prompt tone of power on and LCD shows "Loading...". After that you may loosen the **【MODE】** button and **【FEED】** button. The printer turns into the hexadecimal printing mode and print the presentation.

Quit hexadecimal printing :The way to quit hexadecimal printing mode is switch off the printer or press the **【FEED】** button for three times. The printer will also print the presentation which shows that the printer have quitted hexadecimal printing mode.

3.2.6 Printer Parameters Setting

This function may set some simple printing parameters. There're two methods of entering into parameter setting mode, which can set different parameters.

A. Under the state of power off, hold down the **【FEED】** button and press the **【POWER】** button at the same time. Then loosen the **【POWER】** button and **【MODE】** button orderly when you hear 'one low one high prompt tone and LCD shows "Loading...". The printer turns into the parameters setting mode. Press the **【POWER】** button or **【MODE】** button, LCD shows the first item which can be set parameters and the current numerical value. (Refer to Appendix A.)

Quitting parameter setting: Hold down 【MODE】 and 【FEED】 buttons, then loosen 【MODE】 button and 【FEED】 button. Saving the set parameter and exiting the parameter setting mode. The setting parameters won't be saved if you directly press the 【POWER】 button to turn off the printer.

B. Under the state of standby power, press the 【MODE】 button to enter the parameter setting mode. Use the 【MODE】 button to select the setting parameter item, and use the 【POWER】 button to select the sub-menu of parameter item.(Refer to Appendix B.) Wait for 5 min. to save parameters value automatically.

3.2.7 Battery Charging

The battery will run out after a period of usage. When it nearly runs out, printer will give a alarm through the battery indicator flashing on LCD, at this time, user needs to charge up the battery

The charging method is as following: connecting the adapter to the power socket with 220V, 50HZ, then plug the power charging plug to the power socket of the printer, so the power charging begins. During the course of power charging, the charging indicator 【CHARGE】 goes red, and 【CHARGE】 turns to blue when the charging is full. It takes about 3 hours to charge up the battery. Using the printer during the course of charging power will make the charging time go longer. It shows the failure if the charging indicator 【CHARGE】 goes blue and red during the course of charging. Such as faulty installation of battery, faulty contact of battery or internal temperature of battery is too high or too low. Please don't use printer when it's charging.

3.3 Printer Parameters Setting

Users can set more parameters by using the specified 〈OCBP-M80 Setting Tools〉 software through computer. The setting includes: language、font、printing density、default code page、Bluetooth device name and password, printing mode etc. The setting method please refer to the <OCBP-M80Setting Tools Software Help>, offered with the software together.

3.4 Printer Interface Connection and Printing

3.4.1 USB Connection

The OCBP-M80 printer of standard accessories includes Mini USB cable which connects printer and main device. The USB type belongs to the slave device type. Pins description of Mini-USB as below:

Pin	Function	Notes
1	V Bus	Power +5V
2	Data-	
3	Data+	
4		Blank
5	GND	Ground


3.4.2 Bluetooth Connection

The devices, such as Hand-held device, laptop and other information terminal devices with Bluetooth can drive OCBP-M80 to print by the Bluetooth interface. OCBP-M80 portable printer is compatible with Bluetooth2.0 standard. Power class is CLASS 2, effective communication distance is 10meters. The Bluetooth of the printer belongs to the slave device. The initial name of the printer is OCBP-M80 Printer, the initial password is '1234'; users can change the printer name and password by using <OCBP-M80 Setting Tools> software. Please see the details in help file of <OCBP-M80 Setting Tools>.

Before working, OCBP-M80 Portable Thermal Printer need to be pairing with primary device, matching begins with the host device. Usual matching course is as below:

1. Switch on printer;
2. Host device searches for the outer Bluetooth device;
3. If there are other Bluetooth devices, please select OCBP-M80 Printer;
4. Enter the password '1234';
5. Pairing finished.

Please see details in primary device Bluetooth function instruction for reference.

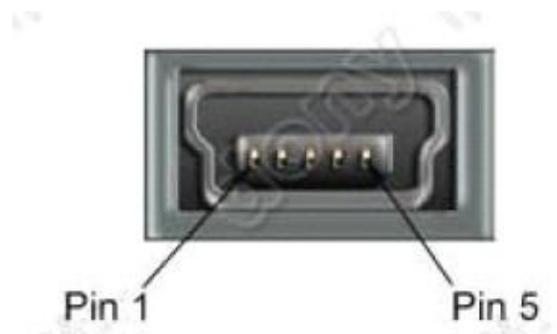

Notice:

- 1, When pairing, please make OCBP-M80 BT switch on.
2. Once OCBP-M80 has paired with the host successful, it can't be paired with other Bluetooth device until it unconnected with the host.

3, The power indicator flashing after paired successful. Printer LCD shows the connection state.

3.4.3 Function of Bluetooth Address Binding

Bluetooth Binding: once the printer remembers the device's address, it only can connect with the first device and can't connect with others. So in this case, if the printer needs to connect with other devices, user can delete the remembered address or set the mode is not binding.

No binding: in this case, the printer can be searched or paired by other devices. So when the printer needs to connect with a fixed device, it would be better to bind address. Please see the details in help file of <M80 Setting Tools>

3.5 Buzzer

There is also a buzzer to indicate various status of the printer. The meanings are as below:


One low one high: power on;

One high one low: power off;

Circulation continuous two lows: printer at mistakes status

3.6 LCD indication

Turn on the printer, the LCD shows "Loading...", and shows the relevant information after printer initialization. If printer didn't receive any data or connect with any device within 5 min., the display will turn off showing automatically. But it'll show again until printer receive data or connect with device.

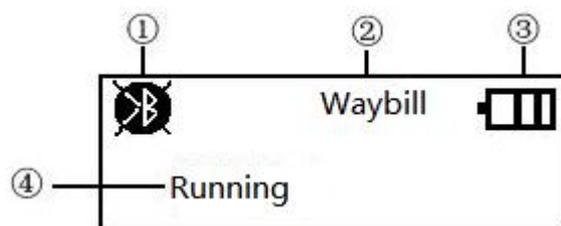

A. Logistics mode:

① When the icon is , it means there's no Bluetooth connection; When the icon is , it means the Bluetooth is on connecting state.

② It shows the different printing modes, waybill online model, receipt online mode, and invoice online mode.

③ The current capacity level of printer battery icon. The different icons  shows the current battery level. When it comes to low battery level and need to charge,

it'll become to show this icon  with flickering


④ Printer current state is showed by text.

It shows running when the printer working normally.

It shows printing when the printer received data.


It shows paper end, abnormal temperature, abnormal volage or cover open alarm according to the printer working errors when printer work.

B. Standard mode:

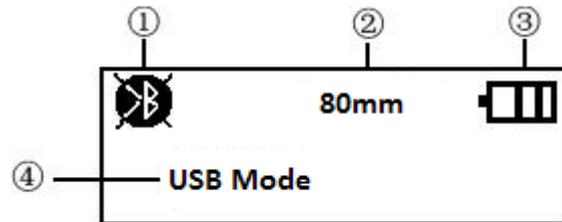

① When the icon is , it means there's no Bluetooth connection; When the icon is , it means the Bluetooth is on connecting state.

② It shows the different paper type, 80mm, 58mm and 44mm.

③ The current capacity level of printer battery icon. The different icons  shows the current battery level. When it comes to low battery level and need to charge, it'll become to show this icon  with flickering

④ Printer current state is showed by text.

It shows USB connected when the printer connect with main device via USB.

It shows USB communicating when the printer received data via USB connection.

It shows Bluetooth connected when the printer connect with main device via Bluetooth and open the COM port.

It shows USB and Bluetooth connected when the printer connect with main device via both Bluetooth and USB.

It shows Bluetooth communicating when the printer received data via Bluetooth connection.

Chapter 4 Other Information

4.1 Command Programming Manual


<OCBP-M80 Technical Manual> is a technical manual for engineer to develop printer utility, and users can claim our company for it. This manual including the technical description of hardware interface (Bluetooth, USB interface), technical documentation of printing control command set, and others such as how to print black mark and locate by it.

4.2 Description of Black Mark Pre-print

If user use pre-print black mark to locate the receipt, please be sure to abide by the

following black mark pre-print regulation when print the black mark paper, if not ,it will cause that the printer can not identify the black mark.

The black mark pre-print regulations are as below:

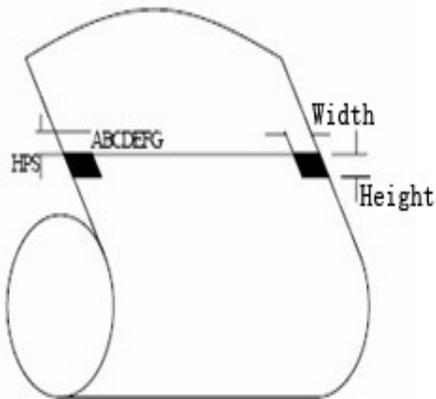

Printing Position: As the picture above, the black mark should be printed on the right or left edge of the side of words.

Width range: $\text{width} \geq 7\text{mm}$

Height range: $4\text{mm} \leq \text{height} \leq 6\text{mm}$

Reflectivity of infrared ray : $< 10\%$ (infrared ray reflectivity of other parts of the black mark paper is $> 65\%$)

HPS: it is the distance between edges of black mark and loading position.


$4.5\text{mm} \leq \text{Hps} \leq 6.5\text{mm}$

Appendix A


Setting introduction: **【MODE】** button is “set” button, when press it once , the set become the next one and it will print the present set value; **【FEED】** button to set the set value, when press it once , the set become the next one and it will print the present set value.

After setting, press **【MODE】** and **【FEED】** button together, it'll save the current value, and printer enters into normal operation state. Or it won't save the value.


General Setting:

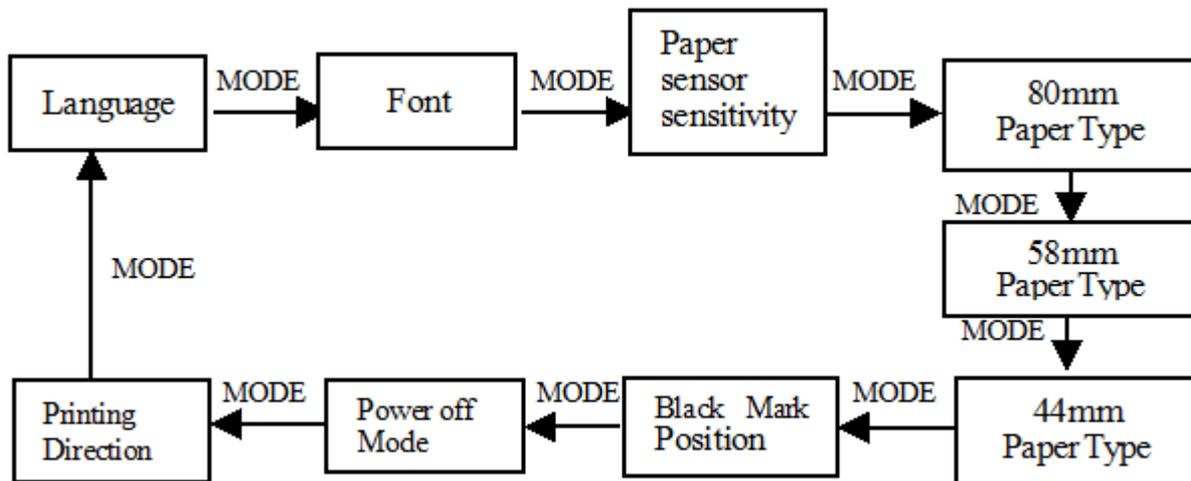


Language Setting:

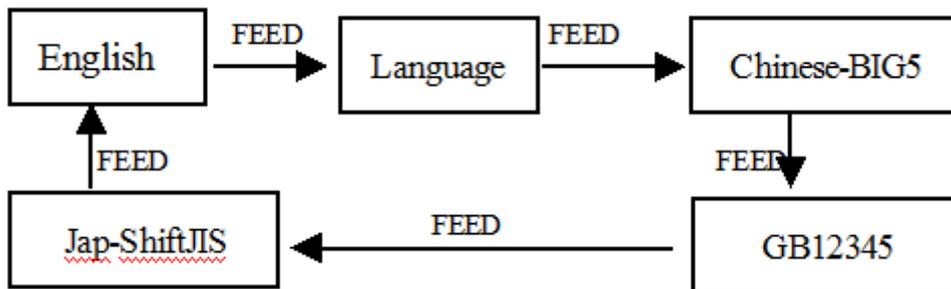


Font Setting:

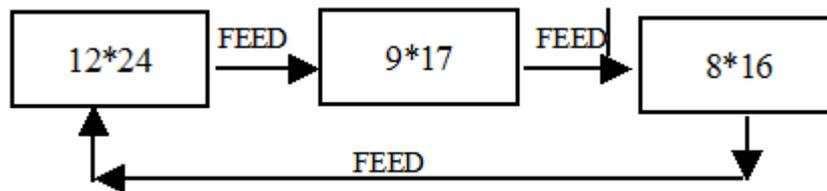


Paper sensor sensitivity Setting:

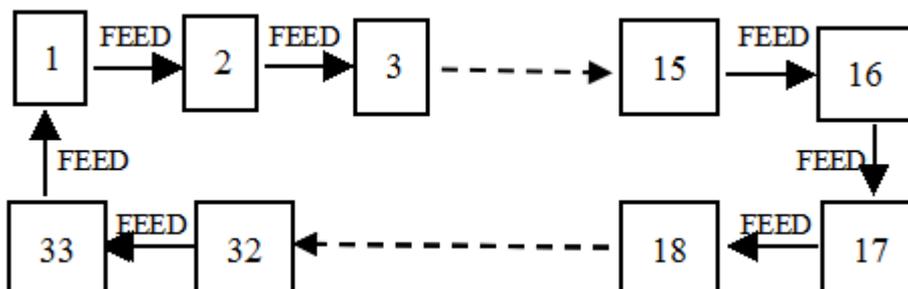


80mm/58mm/44mm Paper Type Setting:

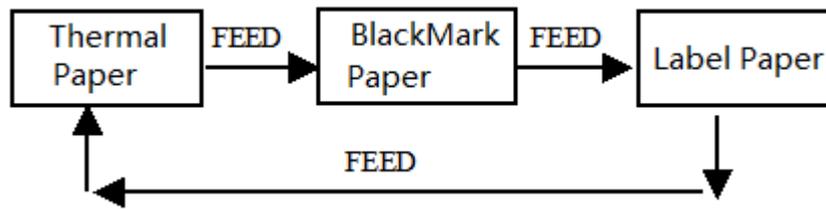


Black Mark Location Setting:

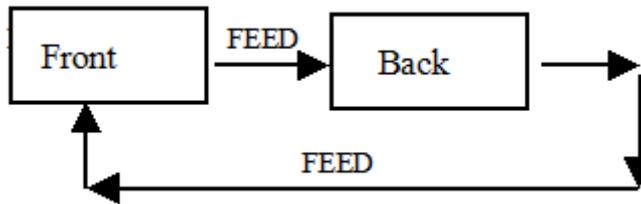

Power off Setting:

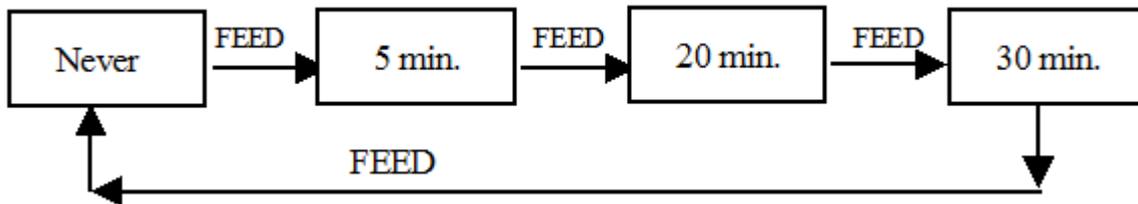


Printing Direction Setting:

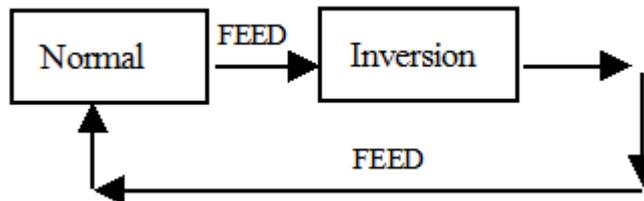


Appendix B

Setting introduction: 【MODE】 button is SET button, when press it once, the set become the next one and it will print the present set value; 【FEED】 button to set the set value, when press it once , the set become the next one and it will print the present set value. After setting, it'll quick the Setting mode automatically and save the current value after 5 min.


General Setting:

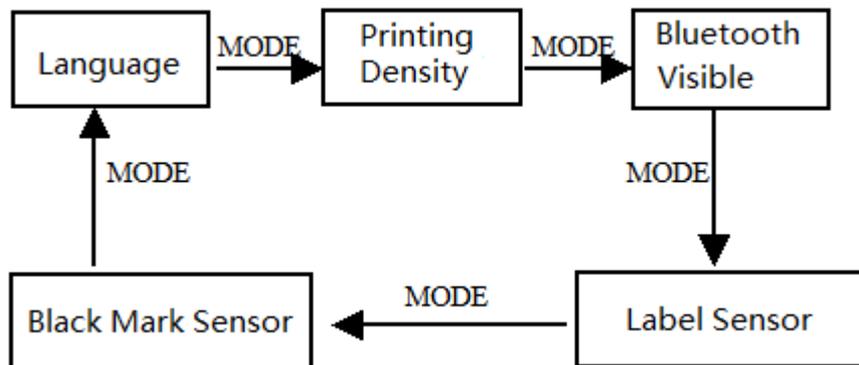


Language Setting:

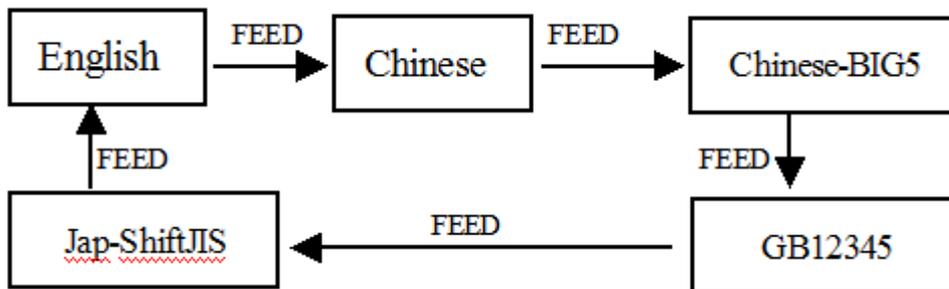

Density Setting:

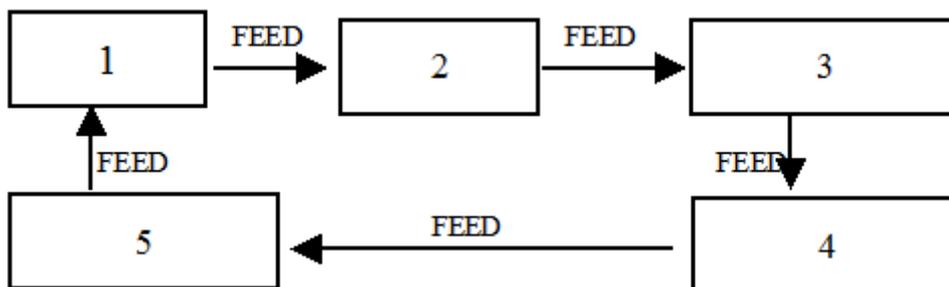

Visible Bluetooth Setting:

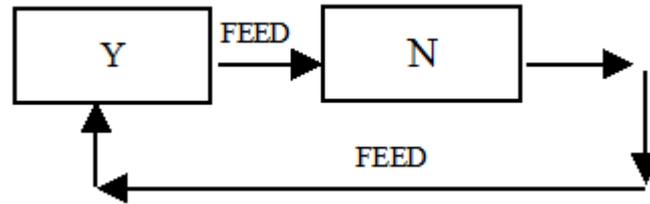

Label Sensor Setting:

Put the 80mm label paper directly into printer under Logistics mode (set as label paper under Standard mode) . Press **【MODE】** , adjust the setting items to label sensor setting, then press **【FEED】** , the printer will feed paper by 260mm, and print out the self-test paper for max power voltage, min voltage, set threshold voltage and the voltage difference between the max and min voltage. It'll save the value after 5min.

Black Mark Sensor Setting:

Put the 44mm black mark paper directly into printer under Logistics mode (set as black mark paper under Standard mode) . .Press **【MODE】** , adjust the setting items to black mark sensor setting, then press **【FEED】** , the printer will feed paper by 260mm, and print out the self-test paper for max power voltage, min voltage, set threshold voltage and the voltage difference between the max and min voltage. It'll save the value after 5min.

Manufacture has right to amend the content of the instruction without prior announcement!