
Thermal Receipt Printer User's Manual OCKP-801

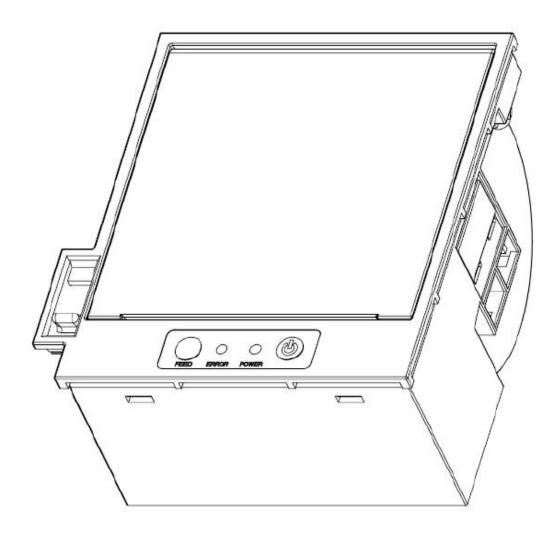

Content

Content	
Introduction	
Chapter 1 Feature and Performance	2
1.1 Print Performance	
1.2 Print Paper	
1.3 Print Font	
1.4 Interface	3
1.5 Print Control Commands	
1.6 Power Supply	4
1.7 Operation Environment	
1.8 Outline Dimension	12
Chapter 2 Operation Specification	13
2.1 Printer Appearance	
2.2 Installation of the printer	
2.3 Paper Installation.	
2.3.1 Paper Loading	
2.3.2 Solution to Paper Jam	
2.4 Interface	17
2.4.1 Serial Interface	17
2.4.2 USB interface	19
2.4.3 Power Connection	
2.5 Buttons and Indicators	19
2.6 Turn on the printer	21
2.7 Self test	21
2.8 Hexadecimal Printing	22
2.9 Setup of printer parameter	
2.10 Entering program upgrading mode	
APPENDIX A: Parameters Setting	

Introduction

OCKP-801 printer is a new type line thermal printer, which features in fast speed print, low print noise, high reliability, perfect print quality and ribbon needless, avoiding the vexation of regular maintenance.

Chapter 1 Feature and Performance

1.1 Print Performance

Print method: direct thermal

Print paper width: 79.5±0.5mm

Print density: 8 dots/mm, 576 dots/line

Print speed: max 170mm / sec.

Reliability

(1)Print head life: 100km

Using condition:

* Print 12 × 24 ANK characters, print 50 lines each time, intermittent print repeatedly

* Use specified thermal paper

(2) Cutter life: 700,000 cuts

Using condition: less than 30 cuts/minute

Valid print width: 72mm

1.2 Print Paper

- Thermal paper roll model: TF50KS—E (Japan paper co.ltd)
 AF50KS-E (JUJO THERMAL)
- Thermal paper roll: Width——— 79.5±0.5mm

Outer Diameter --- 80mm (max.)

1.3 Print Font

ANK Character Set

 $12\times24 \text{ dots}, 1.5 \text{ (W)} \times 3.00 \text{ (H)} \text{ mm}$

GB18030(Chinese):

24×24 dots, 3.00 (W) ×3.00 (H) mm.

1.4 Interface

RS-232C Serial Interface:

IDC10 socket, supports XON/XOFF and DTR/DSR protocols.

Baud rate:1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200bps adjustable.

Data structure: 1start bit + (7 or 8) data bits + 1 stop bit.

Parity checking: no parity or odd, even parity optional.

USB Interface:

Mini USB interface

1.5 Print Control Commands

- Character print commands: support double-width, double height print of ANK characters, user-defined characters and Chinese characters, the character line spacing is adjustable.
- Graphics print commands: support the print of bit-map graphics and download bit-map graphics with different density
- GS bar code print commands: support UPC-A, UPC-E, EAN-13, EAN-8, CODE39, ITF, CODEBAR, CODE93, CODE128, PDF417, QR code, DATA Matrix bar code print.

1.6 Power Supply

• DC24V±10%, 2A, 2114s-02 power socket.

1.7 Operation Environment

- \bullet Operation temperature: -10 \sim 50°C; Operation humidity: 10 \sim 80%
- Storage temperature: -20∼60°C; Storage humidity: 10∼90°C

1.8 Outline Dimension

Pls check outline dimension in the below picture 1-1:

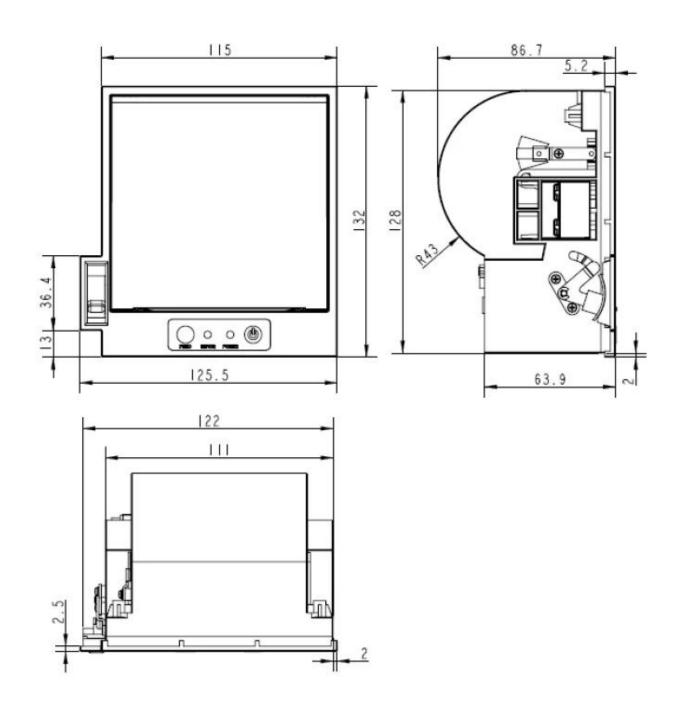


Fig.1-1
Installing hole dimension of customer's panel, as picture1-2:


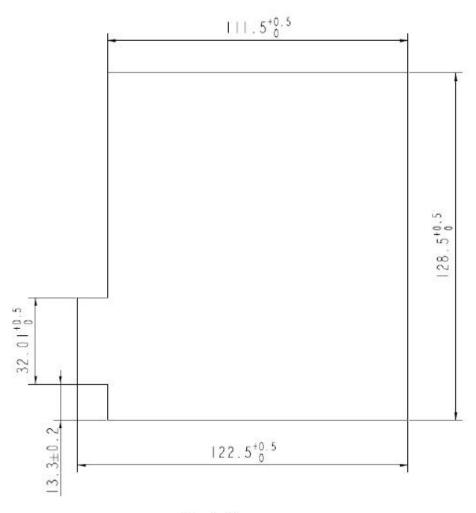


Fig.1-2


Chapter 2 Operation Specification

2.1 Printer Appearance

About the name of each part of printer, pls refer to picture 2-1:

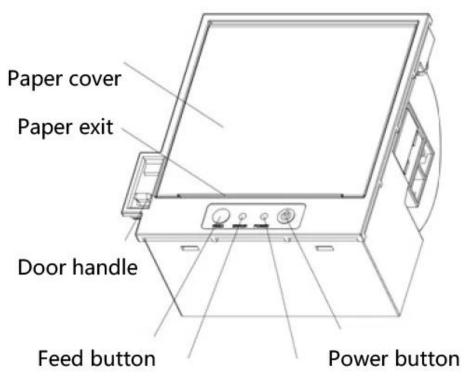

Indicater (Red) Power indicater(Green)

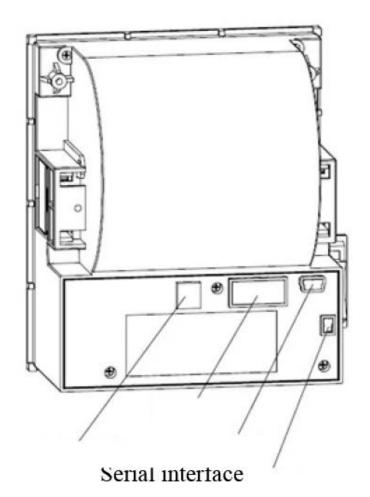


Power socket USB Intertace

Fig.2-1 Printer Appearance

2.2 Installation of the printer

Embedded printer in the installing hole of customer's panel. open the printer paper cover, clockwise to tighten the two screws to complete the installation of the printer . Print installation shown in Figure 2-2.

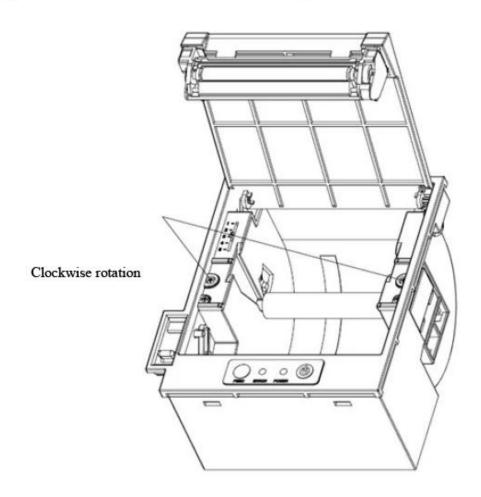

2.3 Paper Installation

2.3.1 Paper Loading

POS801 adopts $79.5 \text{mm} \pm 0.5 \text{mm}$ width thermal paper roll.

Steps of Loading Thermal Paper are as below:

Hold down the upper cover button on the left side, open the movable upper cover, draw a certain length of the paper roll, put the paper end on the print head, close the upper cover and press it downwards lightly.

(Caution!

- 1.Pay attention to the direction of loading paper,make the printing surface face to the print head.
- 2.Please don't feed or draw the paper forwards or backwards with hands.
- Keep clean of the print head, avoid to influence the printing quality.

2.3.2 Solution to Paper Jam

If cutter is jam, turn off the power, and turn on again, the cutter will be back to original position. If paper jam, open the paper strage cover, and take out the paper. If the cutter can not be back to the original position after power on again, open the cover of paper case directly, the cutter will be back to original position before the cover opening.

2.4 Interface

2.4.1 Serial Interface

The serial interface of SP-POS88I V printer is compatible with RS-232C, supports DTR/DSR and XON/XOFF handshaking protocols, uses IDC10 socket. The pin order of the serial port is as Fig.2-3 shows:

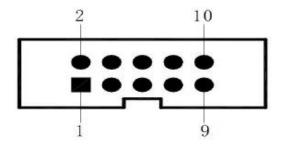


Fig.2-3 Pin Order of Serial Port

The pin assignment of serial interface is shown in Fig. 2-3:

Pin No.	Signal Name	Signal Direction	Source	Description	
DTR 2		Output	Printer	Signal "MARK" means the host is busy and can not receive data. Signal "SPACE" means the host is ready to receive data.	
3	TXD	Output	Printer	Printer transmits control code X-ON/X-OFF and data to host	
DSR Input		Host	Signal "MARK" means the host is busy and can not receive data. Signal "SPACE" means the host is		

				ready to receive data.	
5	RXD	Input	Host	Printer receives data from	
6	RTS	Output	Printer	Same with Pin No.2 DTR Signal	
9	GND	(2 -1000,000,000,000,000,000,000,000,000,00		Signal Ground	

Fig. 2-3 The pin assignment of serial interface

Note: (1)"Source" denotes the source that signal come from;

(2)Logical signal level is EIA.

The baud rate and data structure in serial interface mode is 9600bps, 8-bit data bits, no parity bit and 1 stop bit. The serial interface of OCKP-801 can be connected to standard RS-232C interface. When it is connected to IBM PC or its compatible machine, connection can accord to Fig.2-4.

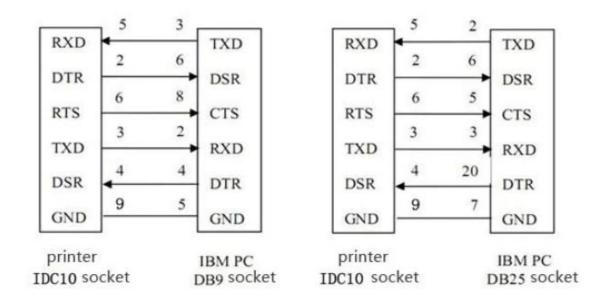


Fig.2-4 Connection between OCKP-801 and IBM PC Serial Interface

2.4.2 USB interface

The USB interface of the POS801 printer is mini-USB interface, outer appearance and pin assignment is shown in Figure 2-5:

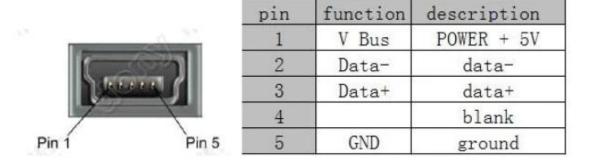


Figure 2-5; Mini-USB socket and pin definitions

2.4.3 Power Connection

OCKP-801 printer uses the external power supply adopter as 24V±10% \ 2A, power socket is 2114S-02 model, as Fig. 2-6 shows:

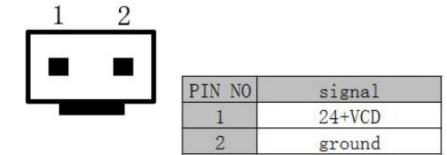


Fig.2-6 Power Socket

2.5 Buttons and Indicators

There are two buttons, one inner buzzer and two indicators for POS801.

[POWER] is power button. When printer is off, press [POWER] button for one

second, the buzzer will sound, then release 【POWER】button. Printer gets into the normal working status. When the printer is on, press 【POWER】 button for one second, the buzzer will sound, then release 【POWER】 button. Printer is powered off.

【FEED】 is paper feed button. The function of this button is on/off can be set by print command. When the function of this button is on, press 【FEED】 button to feed paper; release 【FEED】 button to stop feeding button.

The buzzer can indicate the error and cutter status. Through parameters setting, the buzzer can be set into error alarm, paper-cut indicating or both above. The types of error status are same as ERROR indicator.

The green POWER light is the power indicator. POWER indicator lighting means the printer is power on.

The red ERROR light is error status indicator. It is off when the printer works normally; while it flashes or persismently lights when the priner has abnormal alarm.

If ERROR indicator flashes or persisment lights and the buzzer sounds, it means the printer has error.

According to different flashing types, the different errors of printer are indicated:

- 1. Un-recoverable error: the times of indicator flashing and buzzer sound indicate the error type, then indicator persismently light.
- 2. Recoverable error: the times of indicator flashing and buzzer sound indicate the error type, then indicator is persismently off.
- 3. Automaticly recoverable error: the indicator flashes and the buzzer sounds continuously.
- 4. Paper out: the indicator lights and the buzzer sounds persismently. The details are as below,

a. Un-recoverable error, the indicator flashes several times, then persismently lights. Then cycle. The times of flashing means the error type.

Error type	Description	Types of ERROR flashing
Un-recovera ble error	LED flashes once : Memory read - write errors	
	LEDflash twice: Over-voltage	
	LED flashes three times: the voltage is lack	
	LED flashes four times : CPU	7.VVV
	Execution error (wrong	

addression)	
LED flashes five times : UIB error	
LED flashes eight times : temperature detection of circuit is wrong	<u>} − 2564</u>

 Recoverable error: the indicator continuously flashes and persisment off for a period.

Error type	Prescription	Type of flash
	LED flashes once .the place of cutter is wrong	

c. Automaticly recoverable error: the indicator flashes continuously.

Error type Description		Type of flash	
Automaticly recoverable error	LED continues flashing: the temperature of printing head is over high and the cover is wrong		

2.6 Turn on the printer

When the printer is off and paper case cover is closed, press the POWER button to turn on the printer and the ERROR indicator flashes twice, then indicator off. The printer enters into the normal working mode.

2.7 Self test

The self-test will check the condition of printer, if the printer prints out the self-test receipt correctly, it means the printer works normally except interface with host. Otherwise it needs to repair.

The self-test will print out: Manufacturer name, printer model, software version, interface type, default value of printer parameters, 96 ANK characters in ASCII code, content of default codepage (if language is set English) or name of Chinese character library (if the language is set Chinese), barcode

type, at last four lines black and white alternating icon.

Way of self-test: hold down [FEED] button and press [POWER] button to turn on the printer, after buzzer sounds, release [POWER] button firstly, then release [FEED] button. At this time, printer will print out self-test receipt. The content is as below picture 2-7:



Fig. 2-7

2.8 Hexadecimal Printing

Turn on the printer according to the step below, it will enter the mode of Hexadecimal Printing

- 1. Open the cover;
- 2.Hold down [POWER] button to turn on the printer
- 3.Close the cover, the printer will print out 3 lines as below:

Hexadecimal Dump

To terminate hexadecimal dump,

Press FEED button three times.

This means the printer has entered hexadecimal printing mode, and under this mode, all of the input will be printed out as hexadecimal number. Paper will

feed one line with single-click of "FEED" button, after 3 times, it will print out "*** Completed ***", and exit hexadecimal printing mode.

2.9 Setup of printer parameter

This function is for the setup of parameters.

Steps for setting parameters: Power off, open 【Printer Roller】 and press the 【FEED】 button at the same time; release the 【FEED】 button after light flashing; then press the 【FEED】 twice and close the 【Printer Roller】; printer is in the parameter setting mode. Print the first parameter which can be set and its current setup; Details can be seen according Appendix.

Steps for exiting of parameter setup: open 【Printer Roller】 and press the 【FEED】 button; then close the 【Printer Roller】, release the 【FEED】 button and save the setup of parameter and exit; enter the normal mode; the date will not saved if turn off the printer just through pressing 【FEED】 button.

2.10 Entering program upgrading mode


When printer power is off, open paper case cover, hold down the 【FEED】 button, then press 【POWER】 button and turn on the printer. After hearing the buzzer "one low one high" sound, release 【POWER】 button. Printer enters into the program upgrading mode. At this time, the indicator flashes once each second.


Notice: Both serial interfacen and USB interface can support programm upgrading online.


APPENDIX A: Parameters Setting


This appendix is the method of setting default parameters of printer by buttons. Setting instruction: Using button for paper case cover to choose setting item. Pressing this button once, the setting item will go to the next and also print out the current value of this item. Using 【FEED】 button to choose the setting value of item. Press the button once, the setting value will go to the next.


Summary				
	min	317/	COTT	13/11
Ju		al v	Setu	mu.

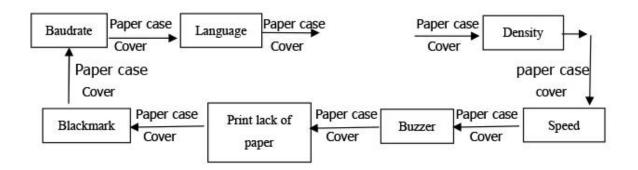


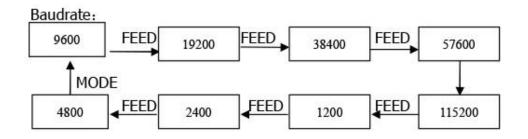


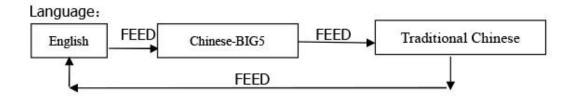

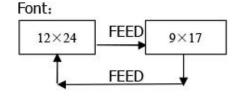


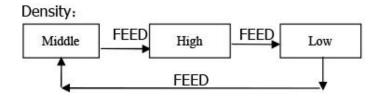

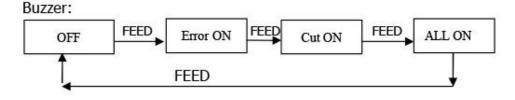

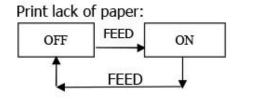

Blackmark:

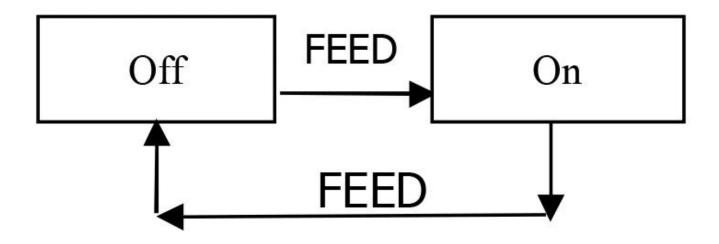

Preguntas más frecuentes

1. Política de MOQ

No hay limitación de MOQ para los productos estándar, pero el precio unitario es diferente, cuanto mayor sea la cantidad, mejor precio.

Para una producción personalizada, puede discutir el MOQ con nuestro representante de ventas directamente.

2. Disponibilidad de muestra y & Política

Una vez que los clientes confirmaron la especificación, nos complace proporcionar muestras para la prueba y la calificación.

Todas las muestras deben pagarse antes del envío, el precio de las muestras es superior al pedido en masa. Cuando se realiza el pedido en masa, podemos devolverle el costo de las muestras o enviarle más productos de pieza con los envíos.

Puede comprar las muestras directamente usando t / t, western uion o paypal. Y también puedes comprarlo en nuestra tienda online.

3. Garantía

OCOM se dedica a proporcionar los productos y servicios más rentables con una calidad confiable que satisfaga la satisfacción de los clientes;

Fuimos calificados por la compañía global Fortune 500, y tenemos la garantía comercial de nivel 1 superior, que protege al 100% su tiempo y plazo de entrega.

Nuestra garantía de los productos es de aproximadamente 12 + 1 meses desde el envío, normalmente, algunos modelos designados pueden tener hasta 24 meses de garantía;

Cualquier producto dentro de los 30 días posteriores a la falla en la entrega se considerará como entrega no válida (DOA). Los productos DOA darán prioridad al reemplazo y se enviarán por mensajería.

Para pedidos masivos, nos gustaría suministrar algunas piezas de repuesto con envío para reparaciones locales rápidamente. Y después de eso, puede devolver piezas de falla para retrabajo y análisis.

4. Condiciones de pago

Para el pedido en masa, puede pagarnos utilizando T / T, LC, Western Union, Escrow u otros. Acerca de las muestras orden, T / T, Western Union, depósito de garantía, Paypal son aceptables. Actualmente, puede pagar con Moneybookers, Visa, MasterCard y transferencia bancaria. También puede pagar con ciertas tarjetas de débito como Maestro, Solo, Carte Bleue, Pos tePay, CartaSi, 4B y Euro6000.

5. Envío

Aceptamos todo tipo de formas de envío, incluyendo: expreso, aéreo, marítimo, camión o recogida por parte de los clientes personalmente.

6. cliente

Nuestros principales clientes de Eruopean, Australia, y el rápido crecimiento de Sudamérica, África, Rusia ...,

Hemos servido a más de 2200 clientes de 159 países, incluida la compañía global Fortune 500 como Unilever, O2 ... 50 de ellos son el mayor distribuidor en los territorios locales.

¿Por qué elige OCOM?

- · Proveedor líder de productos relacionados con One-Stop POS y Auto-ID calificado por Global Fortune 500 Companies
- · Clientes de nivel 1, incluidos Unilever, O2, Star ...
- · 2200 + clientes cubren 159 países;
- · 9 años de experiencia OEM / ODM.
- · Garantía de comercio de nivel 1 superior en calidad de garantía industrial POS y fecha de envío
- · Respuestas rápidas y servicio profesional.
- · Certificados ISO, FCC, CE, Soncap, POA, BIS y otros
- · 12 + 1 meses de garantía.
- · Seleccionado en "China Best Employer Award"
- · Creencia: Basada en la integridad, lucha por la excelencia, cooperación beneficiosa para todos

Información de la empresa

OCOM Technologies Ltd. es el principal proveedor y fabricante de productos relacionados con POS y Auto-ID con TUV verificado.

El portafolio de productos de OCOM cubre impresoras térmicas, impresoras de códigos de barras, impresoras matriciales, escáneres de códigos de barras, terminales POS, lectores de tarjetas magnéticas, terminales de fecha y otros productos periféricos POS (cajón de efectivo,

pantalla del cliente, monitor POS, teclado POS, contador de dinero, Escala electrónica, papel térmico), que se utilizan ampliamente para la venta minorista, restaurantes, bancos, loterías, transporte, logística y otras aplicaciones. Contamos con certificaciones CE, FCC y otras requeridas.

La misión de OCOM es ser la opción convincente para nuestros socios, y nuestras tres creencias básicas son "Basada en la integridad, Luchar por la excelencia, cooperación ganarganar". Nos gustaría establecer asociaciones estables y confiables con clientes de todo el mundo. OEM / ODM es bienvenido

Juntos buscamos lo mejor.

OCOM Technologies Limited.

Dirección: 4 / F, Bloque 10, Parque Industrial Zhongxing, Carretera Chuangye, Nanshan

Shenzhen 518054, China;

Sitio web: www. ocom inc.com, www. Solución pos.

Correo electrónico: richard@ocominc.com, richard@ocomtech.com .cn;

Gerente Comercial: sz ocom inc;

Skype: ocom inc2000;

MSN: ocomtech@hotmail.com;

QQ: 2485890637; Wechat: hj34924238;

Whatsapp: 0086.133.52932860;

Móvil: 0086.133.52932860;

Tel: 0086.755.86053207 ext 808; Fax: 0086.755.86053207 ext 868;

^{*} Proveedor de productos relacionados confiables de una sola parada POS que atiende a clientes de Fortune 500 globales *